

# FLEXICODE

Operating Manual



Copyright by Carl Valentin GmbH / 7979005.1216

Information on the scope of delivery, appearance, performance, dimensions and weight reflect our knowledge at the time of printing.

We reserve the rights to make modifications.

All rights, including those regarding the translation, are reserved.

No part of this document may be reproduced in any form (print, photocopy or any other method) or edited, copied or distributed electronically without written permission from Carl Valentin GmbH.

Due to the constant further development of our devices discrepancies between manual and device can occur.

Please check [www.carl-valentin.de](http://www.carl-valentin.de) for the latest update.

### **Trademarks**

All named brands or trademarks are registered brands or registered trademarks of their respective owners and may not be separately labelled. It must not be concluded from the missing labelling that it is not a registered brand or a registered trademark.

Carl Valentin direct print modules comply with the following safety guidelines:

- CE** EG Machinery Directive (2006/42/EG)
- EG Low-Voltage Directive (2006/95/EG)
- EG Electromagnetic Compatibility Directive (2004/108/EG)



### **Carl Valentin GmbH**

Postfach 3744  
78026 Villingen-Schwenningen  
Neckarstraße 78 – 86 u. 94  
78056 Villingen-Schwenningen

Phone +49 (0)7720 9712-0  
Fax +49 (0)7720 9712-9901

E-Mail [info@carl-valentin.de](mailto:info@carl-valentin.de)  
Internet [www.carl-valentin.de](http://www.carl-valentin.de)

## Table of Contents

<b>Table of Contents</b> .....	<b>3</b>
<b>1 Introduction</b> .....	<b>5</b>
1.1 General Instructions .....	5
1.2 Intended Use .....	5
1.3 Safety Instructions .....	6
1.4 Environmentally-Friendly Disposal .....	7
<b>2 Machine Overview</b> .....	<b>9</b>
2.1 Figures .....	10
2.2 Continuous Mode .....	12
2.3 Intermittent Mode .....	13
<b>3 Operating Conditions</b> .....	<b>15</b>
<b>4 Technical Data</b> .....	<b>19</b>
4.1 Control inputs and outputs .....	21
4.2 Pin assignment of encoder socket .....	28
<b>5 Installation and Initiation</b> .....	<b>29</b>
5.1 Installation of Print Mechanics at Machines .....	30
5.2 Connection of Pneumatic Power Supply .....	32
5.3 Adjustment of Pressure Power .....	33
5.4 Connecting the Direct Print Module .....	34
5.5 Before Initial Operation .....	34
5.6 Print Control .....	35
5.7 Initial Operation .....	35
5.8 Loading Transfer Ribbon .....	36
5.9 Increasing the Clamping Force for Ribbon Roll .....	37
<b>6 Operation Panel</b> .....	<b>39</b>
6.1 Keyboard (Standard) .....	39
6.2 Keyboard (Text Entry/User Guiding) .....	40
<b>7 Function Menu</b> .....	<b>43</b>
7.1 Menu Structure (Continuous Mode) .....	43
7.2 Menu Structure (Intermittent Mode) .....	46
7.3 Print Settings .....	49
7.4 Machine Parameters (Continuous Mode) .....	50
7.5 Machine Parameters (Intermittent Mode) .....	52
7.6 Layout .....	54
7.7 Ribbon Save .....	55
7.8 Ribbon Save (Continuous Mode) .....	56
7.9 Ribbon Save (Intermittent Mode) .....	60
7.10 Device settings .....	62
7.11 I/O Parameters .....	65
7.12 Network .....	66
7.13 Remote Console .....	66
7.14 Interface .....	67
7.15 Emulation .....	68
7.16 Date & Time .....	69
7.17 Service Functions .....	70
7.18 Main Menu .....	72
7.19 Display during Printing .....	73
<b>8 Compact Flash Card / USB Memory Stick</b> .....	<b>75</b>
8.1 General Information .....	75
8.2 Display Structure .....	75
8.3 Navigation .....	76
8.4 Define User Directory .....	77

8.5	Load Layout.....	78
8.6	File Explorer .....	79
8.7	Firmware Update .....	84
8.8	Filter.....	84
<b>9</b>	<b>Maintenance and Cleaning .....</b>	<b>85</b>
9.1	General Cleaning.....	85
9.2	Cleaning the Transfer Ribbon Drawing Roller.....	86
9.3	Cleaning the Printhead.....	86
9.4	Replacing the Printhead .....	87
9.5	Angle Adjustment (Intermittent Mode).....	89
9.6	Print Quality Optimisation .....	90
9.7	Cycle optimisation (Intermittent Mode).....	91
<b>10</b>	<b>Signal Diagrams .....</b>	<b>93</b>
10.1	Continuous Mode .....	93
10.2	Intermittent Mode.....	97
<b>11</b>	<b>Error correction .....</b>	<b>99</b>
<b>12</b>	<b>Additional Information .....</b>	<b>109</b>
12.1	Column Printing.....	109
12.2	Hotstart .....	110
12.3	Password Protection.....	112
<b>13</b>	<b>Index .....</b>	<b>115</b>

# 1 Introduction

## 1.1 General Instructions

Basic information and warning references with the corresponding signal words for the danger level are as follows specified in this manual:



**DANGER** identifies an extraordinarily great and immediate danger which could lead to serious injury or even death.



**WARNING** identifies a possible danger would could lead to serious bodily injury or even death if sufficient precautions are not taken.



**CAUTION** indicates a potentially dangerous situation which could lead to moderate or light bodily injury or damage to property.



**NOTICE** gives you tips. They make a working sequence easier or draw attention to important working processes.



Gives you tips on protecting the environment.



Handling instruction



Optional accessories, special fittings

Datum

Information in the display

## 1.2 Intended Use

The direct print module is a state-of-the-art device which complies with the recognized safety-related rules and regulations. Despite this, a danger to life and limb of the user or third parties could arise and the direct print module or other property could be damaged while operating the device.

The direct print module may only be used while in proper working order and for the intended purpose. Users must be safe, aware of potential dangers and must comply with the operating instructions. Faults, in particular those which affect safety, must be remedied immediately.

The direct print module is solely intended to print suitable media which have been approved by the manufacturer. Any other or additional use is not intended. The manufacturer/supplier is not liable for damage resulting from misuse. Any misuse is at your own risk.

Intended used includes heeding the operating manual, including the maintenance recommendations/regulations specified by the manufacturer.



### **NOTICE!**

The complete documentation is included in the scope of delivery on CD ROM and can also currently be found in the internet.

### 1.3 Safety Instructions

The direct print module is configured for a voltage of 230 V or 115 V (see type plate). It has to be plugged into a grounded socket only.

Couple the direct print module to devices using extra low voltage only.

Before making or undoing connections, switch off all devices involved (computer, printer, accessories etc.).

Operate the direct print module in a dry environment only and do not get it wet (sprayed water, mist etc.).

Do not operate the direct print module in explosive atmosphere and not in proximity of high voltage power lines.

Operate the direct print module only in an environment protected against abrasive dust, swarf and other similar impurity.

In case of cleaning and maintenance with an open cover, ensure that clothing, hair, jewellery and similar personal items do not contact the exposed rotating parts.



#### **NOTICE!**

With the open printing unit (due to construction) the requirements of EN60950-1 regarding fire protection casing are not fulfilled. These must be ensured by the installation into the end device.

The print unit can get hot during printing. Do not touch the printhead during operation. Cool down the print unit before changing material, removal or adjustment.

Carry out only the actions described in these operating instructions. Any work beyond this may only be performed by the manufacturer or upon agreement with the manufacturer.

Unauthorized interference with electronic modules or their software can cause malfunctions.

Other unauthorized work or modifications to the direct print module can endanger operational safety.

Always have service work done in a qualified workshop, where the personnel have the technical knowledge and tools required to do the necessary work.

There are warning stickers on the direct print modules that draw your attention to dangers. Therefore the warning stickers are not to be removed as then you and others cannot be aware of dangers and may be injured.

The direct printing unit must be integrated with the Emergency Stop circuit when it is incorporated into the overall machine.

All isolating safety equipment must be installed before starting-up the machine.

**DANGER!**


Danger to life and limb from power supply!

⇒ Do not open the casing.

**CAUTION!**

Two-pole fuse.

⇒ Before opening the housing cover, disconnect the device from the mains supply and wait approx. 2 - 3 minutes until the power supply unit has discharged.

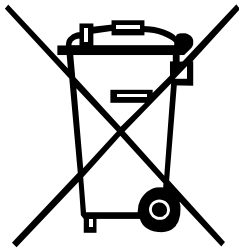

## 1.4 Environmentally-Friendly Disposal

Manufacturers of B2B equipment are obliged to take back and dispose of old equipment that was manufactured after 13 August 2005. As a principle, this old equipment may not be delivered to communal collecting points. It may only be organised, used and disposed of by the manufacturer. Valentin products accordingly labelled can therefore be returned to Carl Valentin GmbH.

This way, you can be sure your old equipment will be disposed of correctly.

Carl Valentin GmbH thereby fulfils all obligations regarding timely disposal of old equipment and facilitates the smooth reselling of these products. Please understand that we can only take back equipment that is sent free of carriage charges.

Further information on the WEEE directive is available on our website [www.carl-valentin.de](http://www.carl-valentin.de).





## 2 Machine Overview

The continuous and intermittent operating direct print module with high resolution is designed for installation in horizontal and vertical packaging machines. Convincing is the availability of left and right versions. Thanks to the separate control unit it is possible to integrate the direct print module almost in each packaging process without any problems.

Flexible labelling of packaging foil is effected either by means of Windows printer driver included in delivery or by our proven design software Labelstar Office/Labelstar PLUS.

With 8 vector fonts, 6 bitmap fonts and 6 proportional fonts the direct print module has a large selection at different font types. It can be printed inverse, in italic format or 90 degrees turned fonts.

The handling of our durable direct print modules is easy and comfortable. The parameter settings are made with the keys of the foil keyboard. At each time the graphic display shows the current status.

By a new-developed electronics a maximum print speed up to 400 mm/s can be achieved.


Time-saving printer update is possible by interface.

As default, the direct print module is equipped with a parallel, serial, USB and Ethernet interface. Additionally, the direct print module is equipped with an USB Host that permits the connection of an external USB keyboard and/or an USB memory stick. The direct print module automatically recognizes by which interface it is controlled.

Thanks to the large number of options the direct print module can be adapted to each task.

## 2.1 Figures


### Connection side of print mechanics

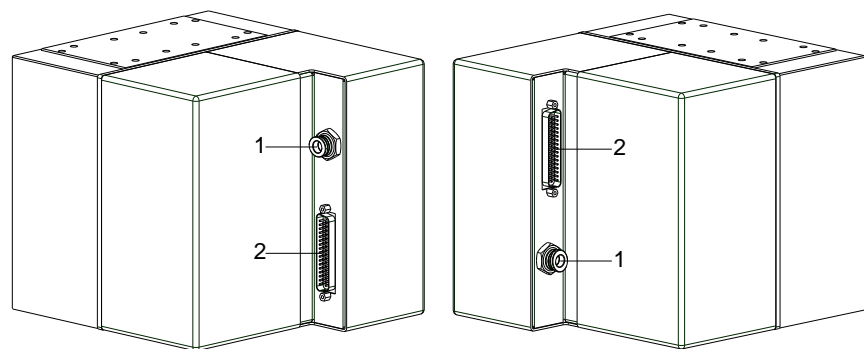

**Figure 1**

- 1 = Pneumatic connection
- 2 = Connecting cable (mechanics - control unit)

### Front of the print unit

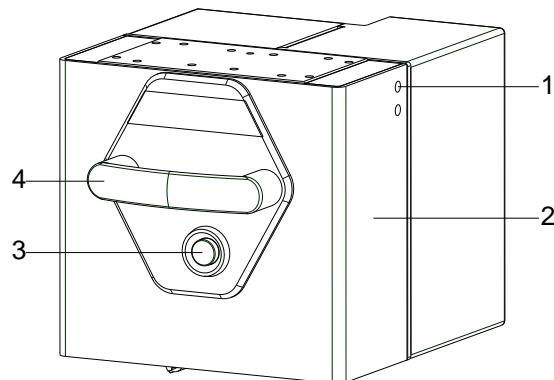

**Figure 2**

- 1 = Lift sensor, internal
- 2 = Cover
- 3 = Spring catch
- 4 = Handle

The cover (2) can be removed by the handle (4) with the spring catch (3) pressed down.




**NOTICE!**

No print job can be initiated when the cover is removed.

An internal cover sensor (1) checks the status of the cover (open/closed). This sensor does not satisfy the requirements of a standard-compliant safety switch (see chapter Safety Instructions, on page 6).

### Connector assignment of control unit

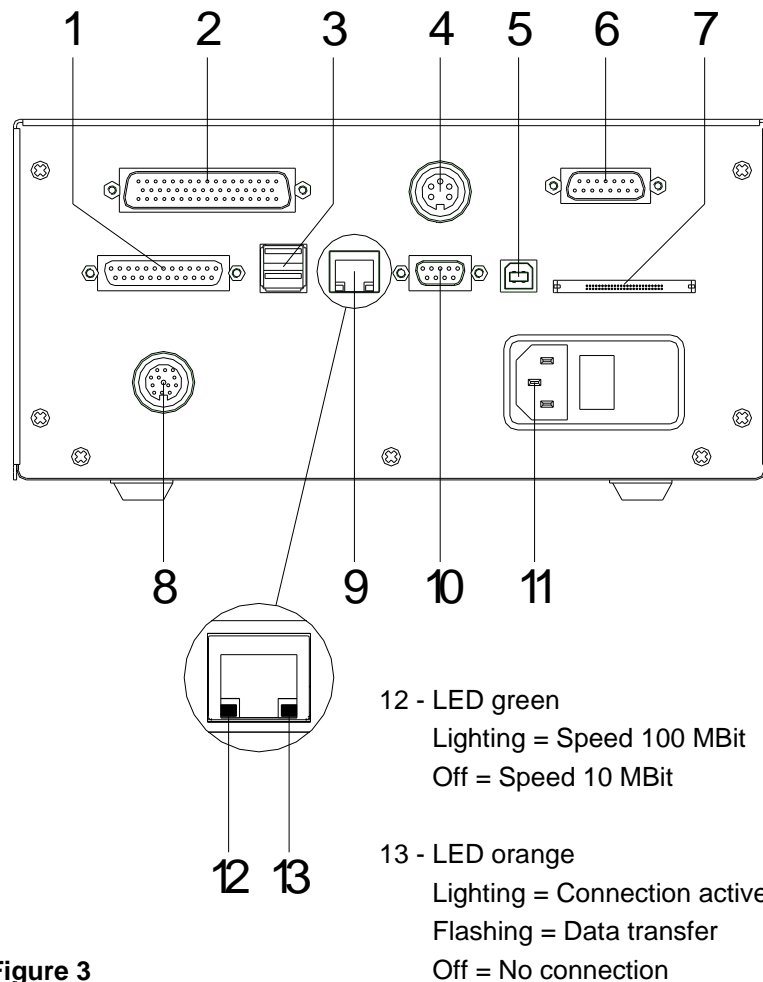

**Figure 3**

- 1 = Parallel interface
- 2 = Connecting cable (mechanics - control unit)
- 3 = USB host for USB keyboard and USB memory stick
- 4 = Encoder connection
- 5 = USB interface
- 6 = External inputs/outputs
- 7 = CF card slot
- 8 = Touch Panel connection
- 9 = Ethernet interface
- 10 = RS 232 interface
- 11 = Power supply with switch

## 2.2 Continuous Mode

### Material Speed

Please note that the material has sufficient adhesion at the pressure transducer roll or encoder roll to permit the exact speed by the encoder.

It is only possible to print when respecting the operating conditions, i.e. the speed has to be observed.

### Print Principle

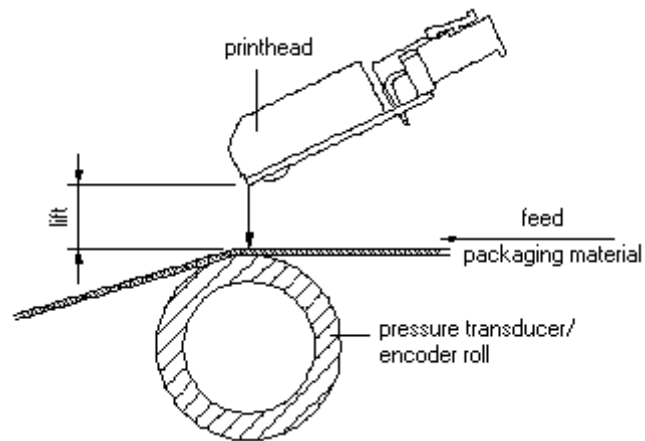


Figure 4

After starting a print order the printhead moves against the print medium. The feed of material is registered by the encoder and then evaluated. The printhead is in start position as long as the printing onto the moving material is finished and then it moves back to its home position.

### Material Guiding

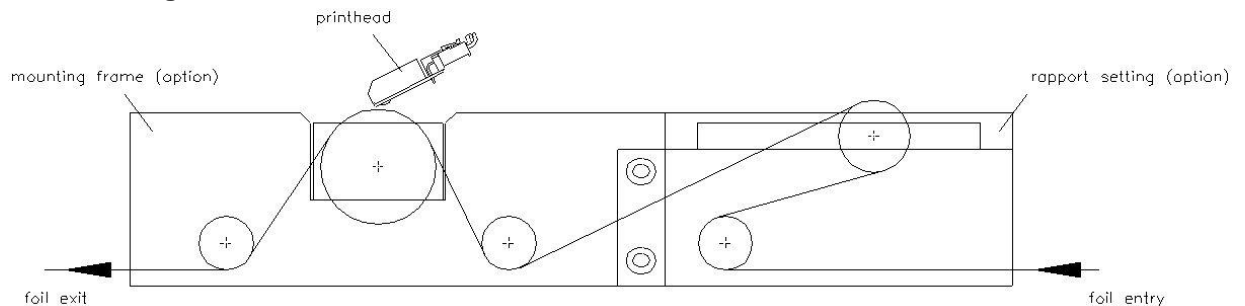


Figure 5




#### NOTICE!

In case the encoder is connected to the counter-pressure roll or the encoder roll you have to observe that the material has sufficient adhesion at the pressure roll or encoder roll to guarantee an exact speed by the encoder.

## 2.3 Intermittent Mode

### Print Principle

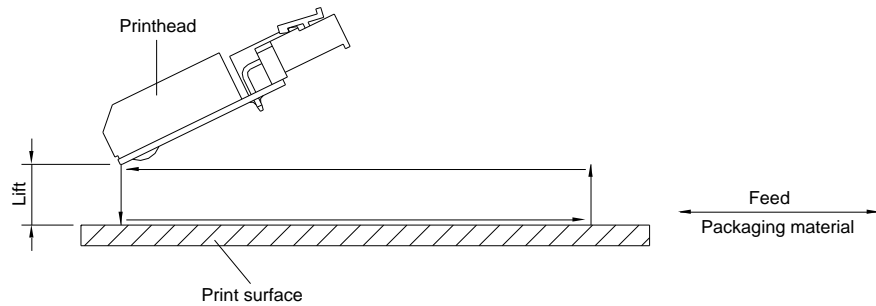


**Figure 6**

After starting a print order the printhead moves against the print medium. Afterwards the printing carriage moves corresponding to the set or transferred layout length linear over the material which is to be printed. After the print procedure the printhead again lifts up and the printing carriage moves again to the starting position.

### Print Position

The direct print module has a print length of 40 mm maximum. The print start position is in a difference of approx. 40 mm to the side panel.

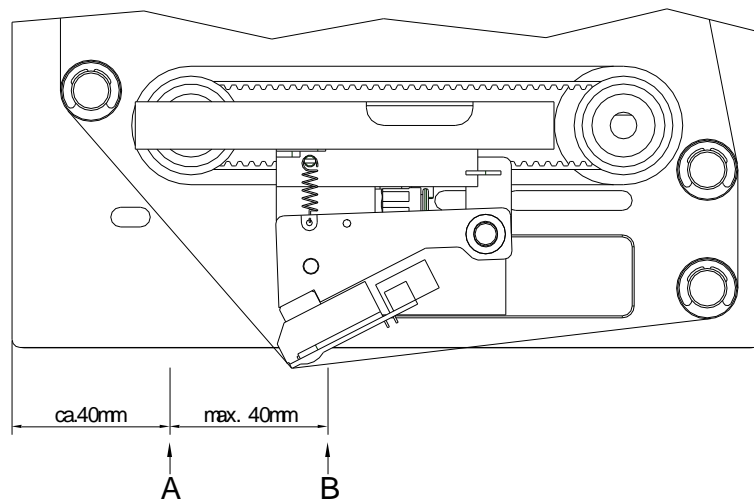

**Figure 7**

A: Start position

B: End position



### 3 Operating Conditions

**Before initial operation and during operation** these operating conditions have to be observed to guarantee save and interference-free service of our direct print modules.

Therefore please carefully read these operating conditions.

Shipment and storage of our direct print modules are **only** allowed in original packing.

Installation and initial operation of direct print modules is only allowed if operating conditions were **fulfilled**.

Commissioning is prohibited until it can be established that, where relevant, the machine into which the partly completed machinery is to be incorporated complies with the provisions of Machinery Directive 2006/42/EC.

Initial operation, programming, operation, cleaning and service of our direct print modules are only recommended after careful study of our manuals.

Operation of direct print modules is only allowed by especially trained persons.



#### **NOTICE!**

Perform trainings regularly. Content of the training are chapter 3 (Operating Conditions), chapter 5.8 (Loading Transfer Ribbon) and chapter 9 (Maintenance and Cleaning).

These indications are also valid for someone else's equipment supplied by us.

Only use original spare and exchange parts.

Please contact the manufacturer with respect to spare/wear parts.

#### **Conditions for installation place**

The installation place of direct print module should be even, free of vibration and currents of air are to be avoided.

The direct print modules have to be installed to ensure optimal operation and servicing.

#### **Installation of power supply**

The installation of the power supply to connect our direct print modules has to be effected according to the international rules and regulations, especially the recommendations of one of the three following commissions:

- International Electronic Commission (IEC)
- European Committee for Electro technical Standardisation (CENELEC)
- Verband Deutscher Elektrotechniker (VDE)

Our direct print modules are constructed according to VDE and have to be connected to a grounded conductor. The power supply has to be equipped with a grounded conductor to eliminate internal interfering voltage.

**Technical data of power supply**

Power line voltage and power line frequency: See type plate

Allowable tolerance of power line voltage:  
+6% ... -10% of nominal value

Allowable tolerance of power line frequency:  
+2% ... -2% of nominal value

Allowable distortion factor of power line voltage:  $\leq 5\%$

**Anti-interference measures**

In case your net is infected (e.g. by using thyristor controlled machines) anti-interference measures have to be taken. You can use one of the following possibilities:

- Provide separate power supply to our direct print modules.
- In case of problems please connect capacity-decoupled isolation transformer or similar interference suppressor in front of our direct print modules.

**Stray radiation and immunity from disturbance**

Emitted interference according to EN 61000-6-4: 01-2007

- Interference voltage to wires according to EN 55022: 05-2008
- Interference field power according to EN 55022: 05-2008
- System perturbation according to EN 61000-3-2: 04-2006
- Flicker according to EN 61000-3-3: 09-2008

Immunity to interference according to EN 61000-6-2: 03-2006

- Stray radiation against discharge of static electricity according to EN 61000-4-2: 03-2009
- Electromagnetic fields according to EN 61000-4-3: 05-2006
- Fast transient burst according to EN 61000-4-4: 11-2010
- Surge according to EN 61000-4-5: 11-2006
- High-frequency tension according to EN 61000-4-6: 03-2009
- Voltage interruption and voltage drop according to EN 61000-4-11: 02-2005

**NOTICE!**

This is a machine of type A. This machine can cause interferences in residential areas; in this case it can be required from operator to accomplish appropriate measures and be responsible for it.

**Machine safety**

- EN 60950-1: 2006 - Safety of packaging machines
- EN 60204-1: 2006 - Safety of machinery - Electrical equipment of machines – Part 1



**Connecting lines to external machines**

All connecting lines have to be guided in shielded lines. Shielding has to be connected on both sides to the corner shell.

It is not allowed to guide lines parallel to power lines. If a parallel guiding cannot be avoided a distance of at least 0.5 m has to be observed.

Temperature of lines between: -15 ... +80 °C.

It is only allowed to connect devices which fulfil the request 'Safety Extra Low Voltage' (SELV). These are generally devices which are checked corresponding to EN 60950.

**Installation of data lines**

The data cables must be completely protected and provide with metal or metallised connector housings. Shielded cables and connectors are necessary, in order to avoid radiant emittance and receipt of electrical disturbances.

**Allowable lines**

Shielded line:

4 x 2 x 0,14 mm<sup>2</sup> ( 4 x 2 x AWG 26)

6 x 2 x 0,14 mm<sup>2</sup> ( 6 x 2 x AWG 26)

12 x 2 x 0,14 mm<sup>2</sup> (12 x 2 x AWG 26)

Sending and receiving lines have to be twisted in pairs.

Maximum line length:

with interface V 24 (RS-232C) - 3 m (with shielding)

with parallel interface - 3 m (with shielding)

USB - 3 m

Ethernet - 100 m

**Air convection**

To avoid inadmissible heating, free air convection has to be ensured.

**Limit values**

Protection according IP: 20

Ambient temperature °C (operation): Min. +5 Max. +40

Ambient temperature °C (transport, storage): Min. -25 Max. +60

Relative air humidity % (operation): Max. 80

Relative air humidity % (transport, storage): Max. 80  
(bedewing of printers not allowed)

**Guarantee**

We do not take any responsibility for damage caused by:

- Ignoring our operating conditions and operating manual.
- Incorrect electric installation of environment.
- Building alterations of our printers.
- Incorrect programming and operation.
- Not performed data protection.
- Using of not original spare parts and accessories.
- Natural wear and tear.

When (re)installing or programming our direct print modules please control the new settings by test running and test printing. Herewith you avoid faulty results, reports and evaluation.

Only specially trained staff is allowed to operate the direct print modules.

Control the correct handling of our products and repeat training.

We do not guarantee that all features described in this manual exist in all models. Caused by our efforts to continue further development and improvement, technical data might change without notice.

By further developments or regulations of the country illustrations and examples shown in the manual can be different from the delivered model.

Please pay attention to the information about admissible print media and the notes to the printer maintenance, in order to avoid damages or premature wear.

We endeavoured to write this manual in an understandable form to give you as much as possible information. If you have any queries or if you discover errors, please inform us to give us the possibility to correct and improve our manual.

## 4 Technical Data

	<b>Flexicode 53</b>
Print resolution	300 dpi
Print speed	50 ... 400 mm/s
Back speed	max. 600 mm/s (intermittent mode only)
Print width	53 mm
Print length	continuous mode: max. 3000 mm intermittent mode: max. 40 mm
Frame passage width	customized
Printhead	Corner Type
<b>Acoustic emission</b>	
Average sound power level	69 dB(A) - Measuring distance 1 m
<b>Transfer ribbon</b>	
Ink	outside / inside
Roll diameter	max. 82 mm
Core diameter	25,4 mm / 1"
Length	max. 450 m
Width	max. 55 mm
<b>Dimensions</b> (width x height x depth)	
Print mechanics without mounting frame with mounting frame	190 mm x 180 mm x 208 mm depends on passage width
Control unit	242 mm x 117 mm x 220 mm (connecting cable set to mechanics 2.5 m)
<b>Weight</b>	
Print mechanics	6,0 kg
Electronics with cable	3.7 kg
<b>Electronics</b>	
Processor	High Speed 32 Bit
RAM	16 MB
Slot	Compact Flash card type I
Battery cache	for Real-Time clock (storage of data with shut-down)
Warning signal	acoustic signal when error
<b>Interfaces</b>	
Serial	RS-232C (up to 115.200 Baud)
Parallel	SPP
USB	2.0 High Speed Slave
Ethernet	10/100 Base T, LPD, RawIP-Printing, DHCP, HTTP, FTP
2 x USB Master	connection for external USB keyboard and memory stick
<b>Connection values</b>	
Pneumatic connection	min. 6 bar dry and free of oil
Nominal voltage	230 V / 50 ... 60 Hz 1,5 A 115 V / 50 ... 60 Hz 3 A (Option)
Fuse values	2x T4A 250V
<b>Operation data</b>	
Temperature	5 ... 40 °C
Humidity	max. 80% (non-condensing)

	<b>Flexicode 53</b>
<b>Operation panel</b>	
Keys	test print, function menu, quantity, CF Card, feed, enter, 4 x cursor
LCD display	graphic display 132 x 64 Pixel with white backlight
<b>Settings</b>	
	date, time, shift times 11 language settings (others on demand) print and device parameters, interfaces, password protection
<b>Monitoring</b>	
Stop printing if	end of ribbon / printhead open
Status report	extensive status print with information about settings e.g. print length counter, runtime counter, photocell interface and network parameters printout of all internal fonts and all supported bar codes
<b>Fonts</b>	
Font types	6 Bitmap fonts, 8 Vector fonts/TrueType fonts, 6 proportional fonts other fonts on demand
Character sets	Windows 1250 up to 1257, DOS 437, 850, 852, 857 all West and East European Latin, Cyrillic, Greek and Arabic (option) characters are supported other character sets on demand
Bitmap fonts	size in width and height 0,8 ... 5,6 zoom 2 ... 9, orientation 0°, 90°, 180°, 270°
Vector fonts/ TrueType fonts	size in width and height 1 ... 99 mm variable zoom orientation 0°, 90°, 180°, 270°
Font attributes	depending on character font - bold, Italic, inverse, vertical
Font width	variable
<b>Bar codes</b>	
1D bar codes	CODABAR, Code 128, Code 2/5 interleaved, Code 39, Code 39 extended, Code 93, EAN 13, EAN 8, EAN ADD ON, GS1-128, Identcode, ITF 14, Leitcode, Pharmacode, PZN 7 Code, PZN 8 Code, UPC-A, UPC-E
2D bar codes	Aztec Code, CODABLOCK F, DataMatrix, GS1 DataMatrix, MAXICODE, PDF 417, QR Code
Composite bar codes	GS1 DataBar Expanded, GS1 DataBar Limited, GS1 DataBar Omnidirectional, GS1 DataBar Stacked, GS1 DataBar Stacked Omnidirectional, GS1 DataBar Truncated
	all bar codes are variable in height, module width and ratio. orientation 0°, 90°, 180°, 270°. Optionally with check digit and human readable line.
<b>Software</b>	
Configuration	ConfigTool
Process control	NiceLabel
Design software	Labelstar Office Lite, Labelstar Office
Windows printer driver	Windows 7® 32/64 Bit, Windows 8® 32/64 Bit Windows 8.1® 32/64 Bit, Windows 10® 32/64 Bit Windows Server 2008® (R2) 64 Bit Windows Server 2012® 64 Bit, Windows Server 2012® (R2) 64 Bit

Technical details are subject to change.

### 4.1 Control inputs and outputs

By means of a maximum of 16 control inputs and outputs which, in the following, are also referred to as ports, different functions of the printer system can be triggered and operating states can be displayed.

The ports are provided by means of a D-Sub bushing (26pin HD) at the rear panel of the printer system and are galvanically isolated from protective earth (PE) by means of an optocoupler semi-conductor route.

Each port can be configured as input and as output. This function however, is predefined in the printer software and cannot be changed by the user.

The following parameters can be changed and set by using the menu: debounce times and high or low active.

#### Printer, internal circuitry


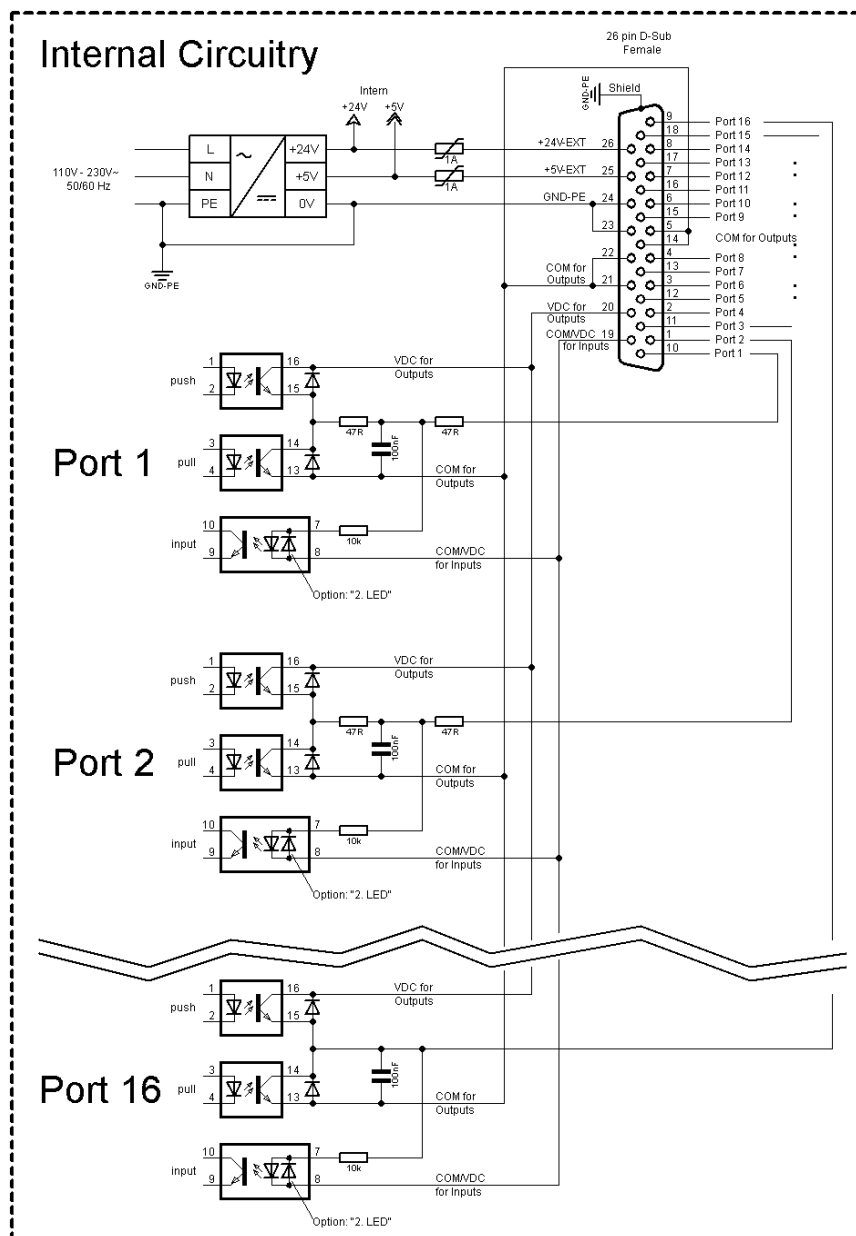


Figure 8

**Configuration of D-Sub socket**

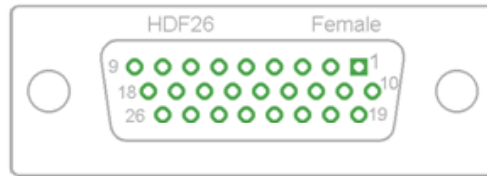

**Figure 9**

Port 1 to Port 16 = Assignment for I/O Profile *Std\_Direct*

Port	Pin	Description / Function
1 (Input)	10	Print start
2 (Input)	1	No function
3 (Input)	11	Counter reset
4 (Input)	2	No function
5 (Input)	12	Error reset
6 (Input)	3	No function
7 (Input)	13	No function
8 (Input)	4	No function
9 (Output)	15	Error
10 (Output)	6	No function
11 (Output)	16	No function
12 (Output)	7	Printing
13 (Output)	17	Ready
14 (Output)	8	No function
15 (Output)	18	Return printing carriage
16 (Output)	9	Transfer ribbon prior warning
COM/VDC for Inputs	19	Common reference potential of all control inputs. 'COM/VDC for Inputs' is usually connected with the (-) terminal of the control voltage and the control inputs are switched to active (+). By means of the option '2nd LED', 'COM/VDC for Inputs' can optionally be connected with the (+) terminal of the control voltage. Then, the control inputs are switched to active (-).
VDC for Outputs	20	Common supply connection of all control outputs. 'VDC for Outputs' must be connected with the (+) terminal of the control voltage. Never leave 'VDC for Outputs' open even if no output is used.
COM for Outputs	5,14 21,22	Common reference potential of all control outputs. 'COM for Outputs' must be connected with the (-) terminal of the control voltage. Never leave 'COM for Outputs' open even if no output is used.
GND-PE	23,24	'GND-PE' is the reference potential of the '+5 VDC EXT' and '+24 VDC EXT' voltages provided by the printer system. 'GND-PE' is printer internally connected with protective earth (PE).

Port	Pin	Description / Function
+ 5 VDC EXT	25	5 Volt DC output for external use. Max. 1 A. This voltage is provided from direct print module and can be used e.g. as control voltage. Never apply any external voltage to this output.
+ 24 VDC EXT	26	24 Volt DC output for external use. Max. 1 A. This voltage is provided from direct print module and can be used e.g. as control voltage. Never apply any external voltage to this output.

Port 1 to Port 16 = Assignment for I/O Profile *StdFileSelDirect*

Port	Pin	Description / Function
1 (Input)	10	Print start
2 (Input)	1	Error reset
3 (Input)	11	Number of the file to load Bit 0 (Input)
4 (Input)	2	Number of the file to load Bit 1 (Input)
5 (Input)	12	Number of the file to load Bit 2 (Input)
6 (Input)	3	Number of the file to load Bit 3 (Input)
7 (Input)	13	Number of the file to load Bit 4 (Input)
8 (Input)	4	Number of the file to load Bit 5 (Input)
9 (Output)	15	Error
10 (Output)	6	No function
11 (Output)	16	No function
12 (Output)	7	No function
13 (Output)	17	Ready
14 (Output)	8	No function
15 (Output)	18	Return printing carriage
16 (Output)	9	Transfer ribbon prior warning

Port 1 to Port 16 = Assignment for I/O Profile *SP\_Direct0*

Port	Pin	Description / Function
1 (Input)	10	Print start
2 (Input)	1	No function
3 (Input)	11	Counter reset
4 (Input)	2	No function
5 (Input)	12	Error reset
6 (Input)	3	No function
7 (Input)	13	No function
8 (Input)	4	No function
9 (Output)	15	Error
10 (Output)	6	Active print order
11 (Output)	16	No function
12 (Output)	7	Printing
13 (Output)	17	Ready
14 (Output)	8	No function
15 (Output)	18	Return
16 (Output)	9	Transfer ribbon prior warning

Port 1 to Port 16 = Assignment for I/O Profile *Old\_Direct0*

Port	Pin	Description / Function
1 (Input)	10	Print start
2 (Input)	1	Error reset
3 (Input)	11	Counter reset
4 (Input)	2	No function
5 (Input)	12	No function
6 (Input)	3	No function
7 (Input)	13	No function
8 (Input)	4	No function
9 (Output)	15	Error
10 (Output)	6	Active print order
11 (Output)	16	Generation
12 (Output)	7	Printing
13 (Output)	17	Print-Ready
14 (Output)	8	Printhead down
15 (Output)	18	Return
16 (Output)	9	Transfer ribbon prior warning




## Technical data

<b>Plug Connector</b>	
Type	D-Sub connector High Density 26-pin. / connector
Manufacturer	W+P-Products
Reference number	110-26-2-1-20
<b>Output Voltages (connected with GND-PE)</b>	
+ 24 V / 1 A	Fuse: Polyswitch / 30 V / 1 A
+ 5 V / 1 A	Fuse: Polyswitch / 30 V / 1 A
<b>Port 1 - 15</b>	
<b>Input</b>	
Tension	5 VDC ... 24 VDC
Impedance	47Ω + (100nF    10 kΩ)
<b>Output</b>	
Tension	5 VDC ... 24 VDC
Impedance	47Ω + (100nF    10 kΩ    47Ω)
Current max.	High +15 mA Low -15 mA
<b>Port 16</b>	
<b>Input</b>	
Tension	5 VDC ... 24 VDC
Impedance	100nF    10 kΩ
<b>Output</b>	
Tension	5 VDC ... 24 VDC
Impedance	100nF    10 kΩ
Current max.	High +500 mA (Darlington BCP56-16) Low - 500 mA (Darlington BCP56-16)
<b>Optocoupler</b>	
Output	TCMT4106, CTR 100% - 300%, Vishay or TLP281-4(GB), CTR 100% - 600%, Toshiba
Input	TCMT4106, CTR 100% - 300%, Vishay or TLP281-4(GB), CTR 100% - 600%, Toshiba
Input Option 2nd LED	TCMT4600, CTR 80% - 300%, Vishay or TLP280-4, CTR 33% - 300%, Toshiba

**Example 1**


Device connection to a machine with S7-300 SPS.

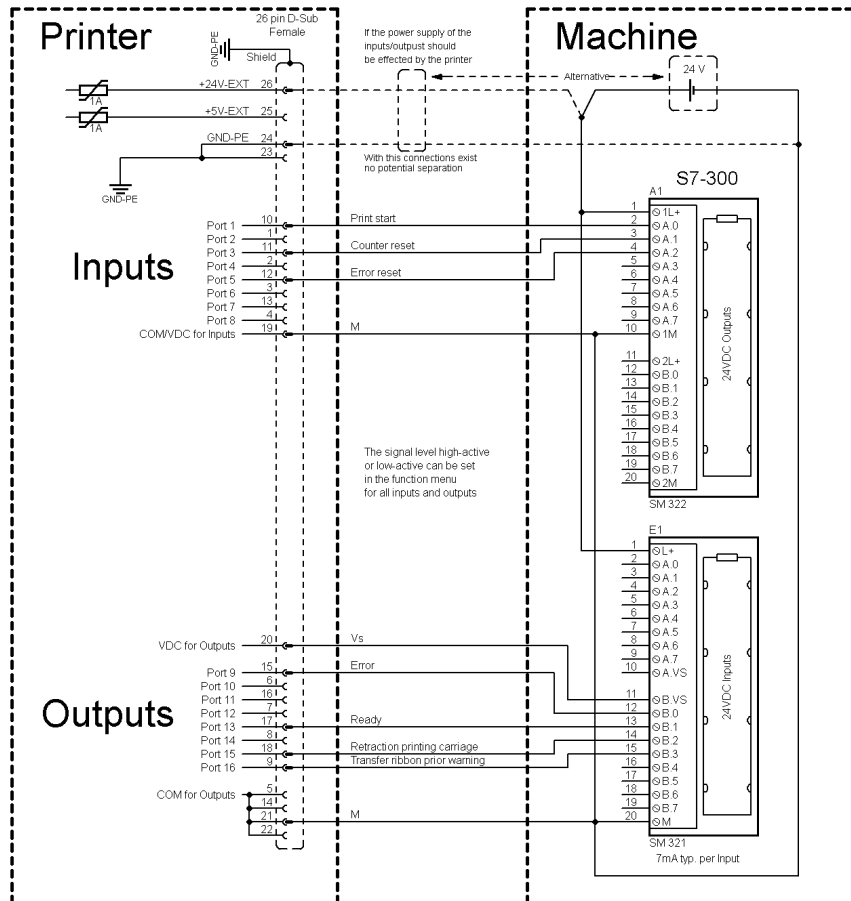

**Figure 10**

**Example 2**


Device connection to an operating panel.

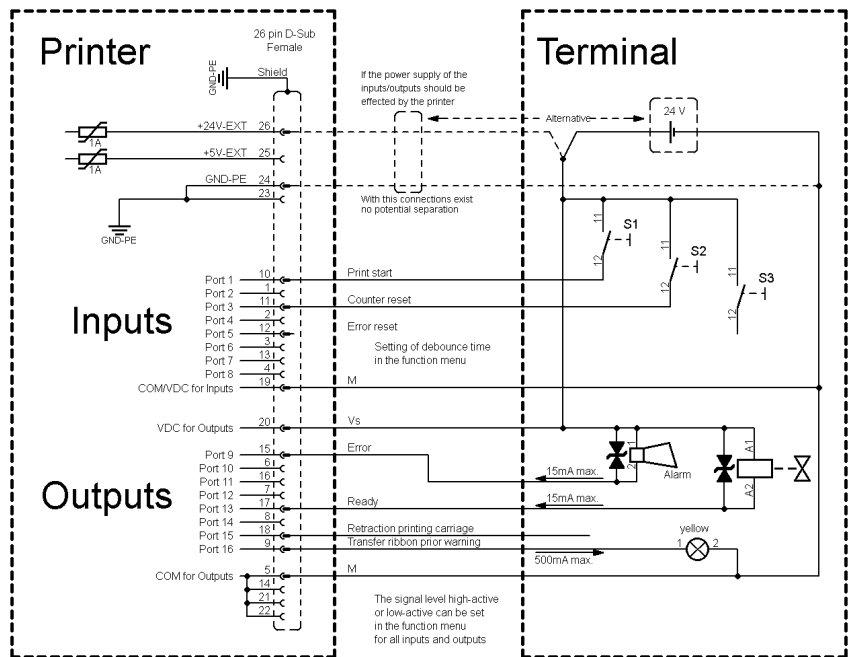

**Figure 11**

**Example 3**

Device connection version if 'Option: 2. LED'.

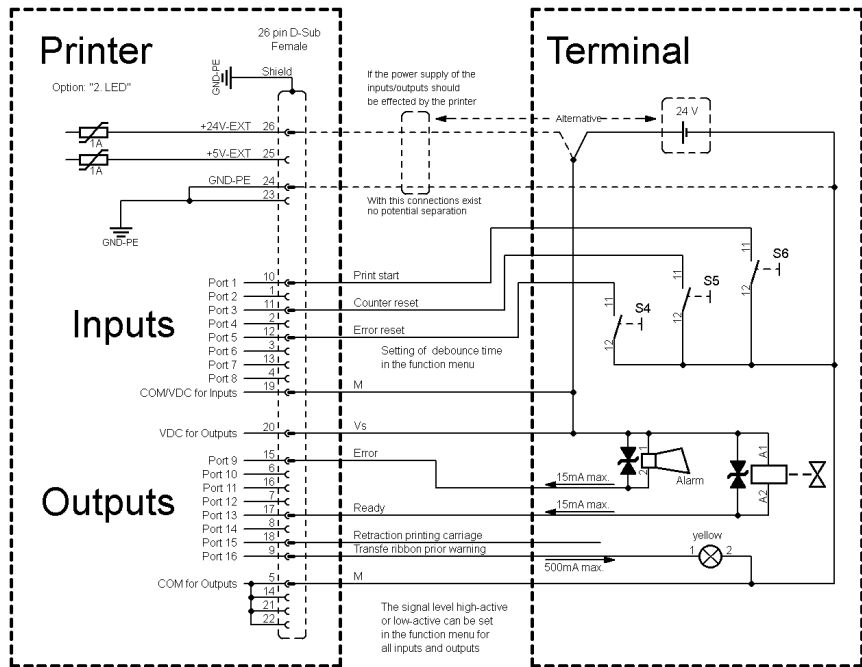

**Figure 12**

**Precautions**

When connecting a reed contact with a control input, the contact must have a switching capacity of min. 1 A in order to prevent the contact from sticking due to the inrush current. As an alternative, a suitable resistor can be connected in series.

If one of the printer's internal voltages '+5 VDC EXT' or '+24 VDC EXT' is used, an external fuse e.g. 0.5 AF, should be additionally installed to protect the printer electronics.

In the event of an inductive load, an antiparallel connected diode, for instance, must be used to discharge the induction energy.


In order to minimise the influence of leakage currents at control outputs, a resistor must, depending on what is connected, be installed in parallel with the load.

In order to avoid any damages to the printing system, the max. output currents must not be exceeded or outputs shorted.

### 4.2 Pin assignment of encoder socket \*

5-pin connecting bushing, contacts according to DIN 45322

connector socket  
encoder

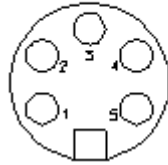

PIN1 = 5 VDC

PIN2 = Encoder signal (channel A)


PIN3 = Encoder signal (channel B)

PIN4 = GND

#### Electrical data of encoder

Operating voltage:	5 VDC
Output signal:	TTL level
Resolution:	Can be set at the print module

#### Connection of encoder

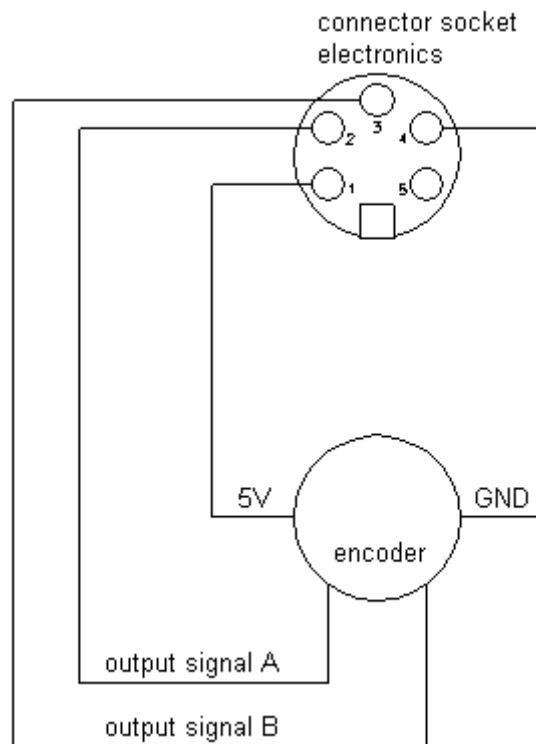

\* only for continuous mode

## 5 Installation and Initiation

### Unpack the direct print module

- ⇒ Lift the direct print module out of the box.
- ⇒ Check the direct print module for transport damages.
- ⇒ Set up the direct print module on a flat surface.
- ⇒ Remove foam transportation safeguards near the printhead.
- ⇒ Check delivery for completeness.

### Scope of delivery

- Print mechanics.
- Control unit.
- Power cable.
- Connecting cable.
- Mini controller.
- Manometer.
- Pneumatic tube.
- Push-on connector.
- I/O accessories (female connectors for I/O I/O 24 cable).
- 1 transfer ribbon roll.
- Empty core, mounted on transfer ribbon rewinder.
- Cleaning foil for printhead.
- Documentation.
- CD with printer drivers.



#### **NOTICE!**

Retain original packaging for subsequent transport.

## 5.1 Installation of Print Mechanics at Machines

### Installation with mounting frame



#### NOTICE!

With the open printing unit (due to construction) the requirements of EN60950-1 regarding fire protection casing are not fulfilled. These must be ensured by the installation into the end device.

At the bottom of the print mechanics are two M8 threads that can be used to fasten the print mechanics.

Please observe the following conditions:

- The maximum thread engagement of the M8 threads is 10 mm.
- The print mechanics has to be installed with a distance from printhead to brake stator of 1...2.5 mm (see illustration).



#### NOTICE!

A distance of 2 mm is recommended.

- The best print results can be received if the silicon of printing roll consists of a hardness of approx.  $60 \pm 5$  Shore A (average value of roughness  $R_a \geq 3,2$  mm).
- The print surface has to be installed parallel to the linear movement of print unit and the focal line of printhead. Discrepancies to the focal line and cavities in the print surface can lead to an inferior print quality at these positions.

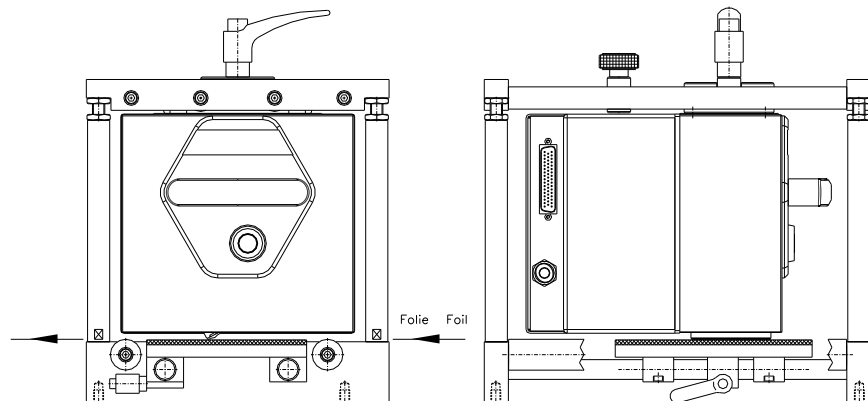
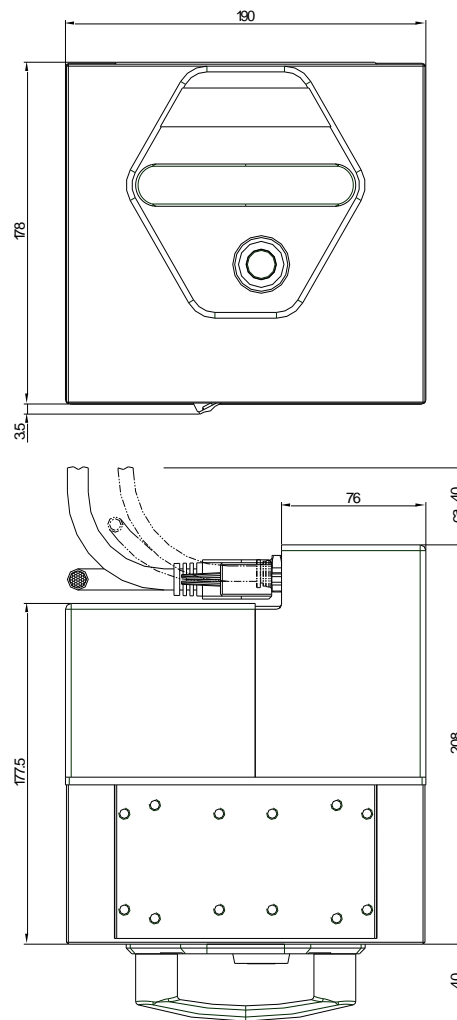


Figure 13

### Installation without mounting frame

In case the machine is used without mounting frame, then it is possible to fix the print module from the top with four M6 screws. The maximum thread engagement of the M6 threads is 6 mm. (position of printhead see illustration)

**Required space for outgoing cable****Figure 14****NOTICE!**

The well-thought-out housing concept provides multiple possibilities for the cable outgoing. With small space requirements the cables can be directed upwards, downwards and to the side.

## 5.2 Connection of Pneumatic Power Supply

The pneumatic power supply for the printhead mechanics has to be made available a minimum continuous pressure of 4 - 6 bars in front of the pressure regulator. The maximum pressure in front of the pressure regulator is 7 bars and 4 bars after the pressure regulator.



### NOTICE!

A pneumatic power supply of 4 bars is recommended.

The compressed-air has to be dry and oil free.

The supplied pressure regulator with manometer is to connect with a plastic tube  $\varnothing$  8 mm via a plugging bolting to the pneumatic power supply. It is necessary to make a connection between the pressure regulator and the print mechanics via a plastic tube  $\varnothing$  8 mm.

Please observe the following notes:

- Position pressure regulator as near as possible to the print mechanics.
- The pressure regulator is only to operate in the direction that is indicated on its underside. The direction shows the way of the streaming air.
- It is not allowed to bend the plastic tubes.
- Shortening of the plastic tubes has to be made with a clean right-angled cut without squashing the tube. If necessary use special tools (available in pneumatic requirements).
- Please observe a possible short length of the 8 mm plastic tubes.


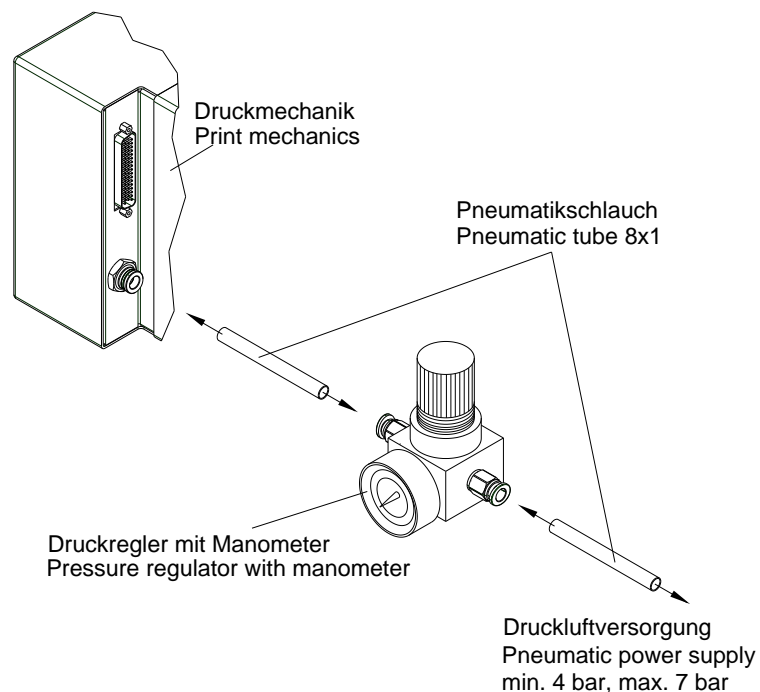


Figure 15



### 5.3 Adjustment of Pressure Power

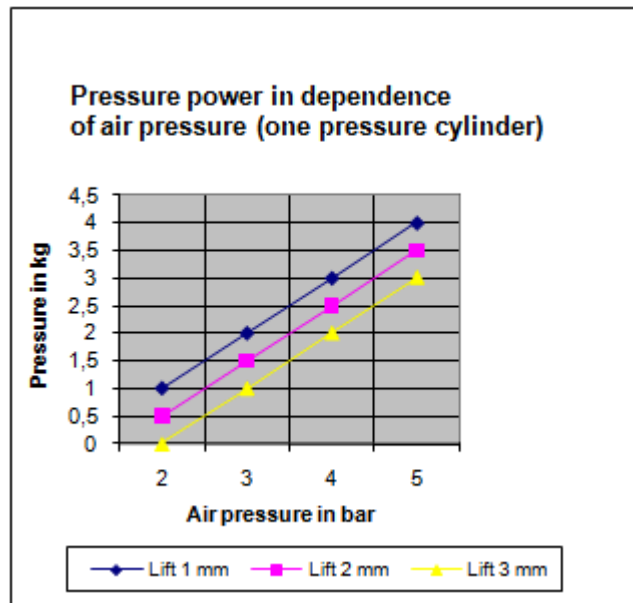

The pressure power of the printhead can be set with the pressure regulator. The values are indicated in the following table:



#### NOTICE!

If the pressure power is too low then the printhead has no more contact to the counter-pressure plate. Due to the missing heat dissipation while printing the printhead is damaged. An error message appears in case of too less pressure. This error message serves to prevent overheating the printhead and is not suitable as pressure quality monitoring. The print quality is also reduced with too low pressure.

'Lift' indicates the distance between printhead and counter-pressure plate in idle mode of device.

**Recommended pressure power:** 40 N

**Max. pressure power:** 45 N

As the mechanical wear and tear of the printhead increases with the pressure power, the pressure power should be as low as possible.

## 5.4 Connecting the Direct Print Module

### Connecting to the power supply

The direct print module is prepared according to standard for a mains voltage of 230 V / 50-60 Hz. Optionally a mains voltage can be used by 115 V / 50-60 Hz. The set mains voltage is mentioned on the type plate.



#### **VORSICHT!**

The direct print module can be damaged by undefined switch-on currents.

⇒ Set the power switch to '0' before plugging in the direct print module.

⇒ Insert power cable into power connection socket.

⇒ Insert plug of power cable into a grounded electrical outlet.

### Connecting to a computer or to a computer network



#### **NOTICE!**

Insufficient or missing grounding can cause faults during operation.

Ensure that all computers and connection cables connected to the direct print module are grounded.

⇒ Connect direct print module to computer or network with a suitable cable.

## 5.5 Before Initial Operation

- Mount print mechanics.
- Connect all cables between print mechanics and control unit.
- Protect cables against unintentional unscrewing.
- Connect compressed air line.
- Connect control unit and PC by printer interface.
- Connect control unit and packaging machine by inputs and outputs.
- Connect power cable of control unit.

## 5.6 Print Control

Because of the fact that the print module is always in control mode it is only possible to transmit and not to start print orders by the available interfaces (serial, parallel, USB or Ethernet). The print is started by a start signal to the 'print start-control input'. It is necessary for the control unit to recognise the moment of setting the start signal and therefore it is possible and also necessary to observe the print status by the outputs.

## 5.7 Initial Operation

Once all connections have been made:

- ⇒ Switch on the control unit.  
After switching on the device the main menu appears which shows the model type, current date and time.
- ⇒ Insert transfer ribbon (see chapter 5.8, page 36).

## 5.8 Loading Transfer Ribbon

As for the electrostatic unloading the thin coating of the thermal printhead or other electronic parts can be damaged, the transfer ribbon should be antistatic.

The use of wrong materials can lead to printer malfunctions and the guarantee can expire.

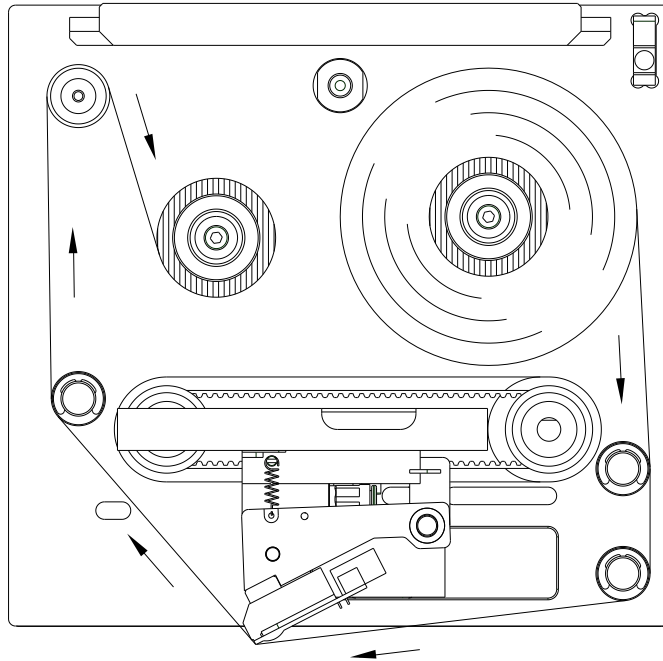


Figure 16



### NOTICE!

Before a new transfer ribbon roll is loaded, the printhead must be cleaned using printhead and roller cleaner (97.20.002). For detailed information, please see page 86.

The handling instructions for the use of Isopropanol (IPA) must be observed. In the case of skin or eye contact, immediately wash off the fluid thoroughly with running water. If the irritation persists, consult a doctor. Ensure good ventilation.

1. Remove the cover by the handle with the spring catch pressed down (3, Figure 2).
2. Load a new ribbon roll as far as it will go onto unwinding roll.
3. Load an empty roll as far as it will go onto rewinding unit.
4. Insert transfer ribbon according to the illustration.
5. Fix ribbon with an adhesive tape at the empty roll and tighten it by some turns of the core.
6. Reinstall the protection cover.

## 5.9 Increasing the Clamping Force for Ribbon Roll



### NOTICE!

We recommend the use of high-quality transfer ribbon with a cardboard core. A sample ribbon roll is included in the scope of delivery. The clamping force of transfer ribbon roll placed on the rewinding/unwinding unit is designed for this quality.

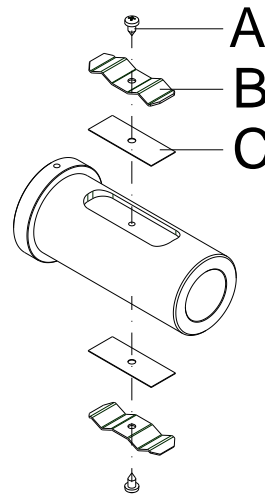


Figure 17

If other transfer ribbons are used, it can occur that the clamping force of the spring plates (B) is not sufficient, in order to position the rolls surely and to protect it against rotating.

When using transfer ribbons with plastic cores a safe positioning of the roles cannot be ensured.



### CAUTION!

Slippage of transfer ribbon roll placed on the rewinding/unwind unit or the empty cardboard core leads to malfunctions.

⇒ When using transfer ribbon rolls with plastic cores the groove must be shimmed.






















### Increasing the clamping force

- Remove screws (A) and spring plates (B).
- Insert shim (C) into the groove. Available from us (52.57.110).
- Fasten again spring plates (B) and shims (C) with screws (A).
- Insert transfer ribbon roll and empty cardboard core on the rewinding/unwinding unit.  
Check firm position!




## 6 Operation Panel

### 6.1 Keyboard (Standard)

Key	Function
	Back to the main menu. Start a test print. Delete a stopped print order.
	Change to the function menu. In function menu: one menu item back.
	Change to the quantity (number of pieces) menu. Press keys  and  to select the number of layouts that should be printed.
	Change to the menu of the CF card.
	In main menu: feed of one layout. In function menu: skip to the next menu item. In dispensing mode: release of start signal.
	Confirm settings and modifications. Stop and continue current print orders. Delete a stopped print order with key  . No further layout of the print order is printed.
	Return to the previous input field. Press keys  and  to change the values.
	Skip to the next input field. Press keys  and  to change the values.
	In function menu: increase figure at the cursor position. In main menu: upwards movement of printhead.
	In function menu: decrease figure at the cursor position. In main menu: downwards movement of printhead.
	Delete the complete input.
	Confirm settings in the function menu. After confirmation of settings, return to the main menu.
	Not yet in use.
	Not yet in use.

## 6.2 Keyboard (Text Entry/User Guiding)

The control unit of the print module is equipped with an alphanumeric character block which allows the user to enter parameters and customised variables without the connection of an external keyboard. Each key contains letters and similar to the use of a mobile phone (like sms) a direct and time-saving input is possible.

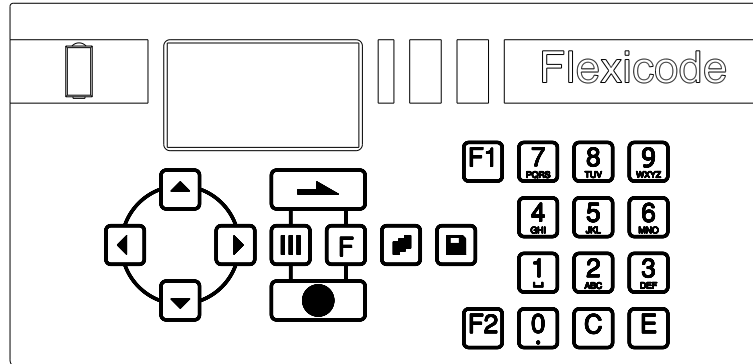

The mode is displayed in the first line at the right position so the user can control in which input mode is selected.

As the input is almost done with characters from one mode, the characters are divided in different groups. Following input modes are available:

Symbol	Modus
0	Standard, starting with figures
M	Starting with capital letters
m	Starting with small letters
A	Input Alt
a	Input Alt, is switched off after one character

### Mode 0

This mode is displayed as default. At first the figure which corresponds to the key is displayed, then all capital and afterwards the small letters.

### Mode M

At first all capital, then the small letters and at last the corresponding figure.

### Mode m

At first all small letters, then the figure and at last the capital letters.















### Mode A

This mode can be used for the creation of special characters. The desired character can be displayed by the assigned number by entering the ANSI code. Please note that the ANSI code has to consist of three digits, i.e. you have possible to enter a zero first.

### Mode a

Same as mode A. After input of the selected ANSI code the machine, however, changes back to the previously selected input mode.





Key	Function
	Back to the main menu. Start a test print. Delete a stopped print order.
	Not yet in use.
	Delete the character at the cursor position. If the cursor is between the last character then the last character is deleted. The characters are deleted only if they were entered via the character block.
	Select the entry mode.
	Confirm the entry and change to the main menu.
	Confirm and/or finish the entry.
	Cursor moves one position to the left.
	Cursor moves one position to the right.
	Customized variables (user guiding): Change between the individual entries.
	Customized variables (user guiding): Change between the individual entries.
	Delete the complete input. The input is deleted only if before entered by using the number block.
	Confirm the settings in the function menu. After confirmation of the settings, return to the main menu.
	Not yet in use.
	Not yet in use.




## 7 Function Menu


### 7.1 Menu Structure (Continuous Mode)

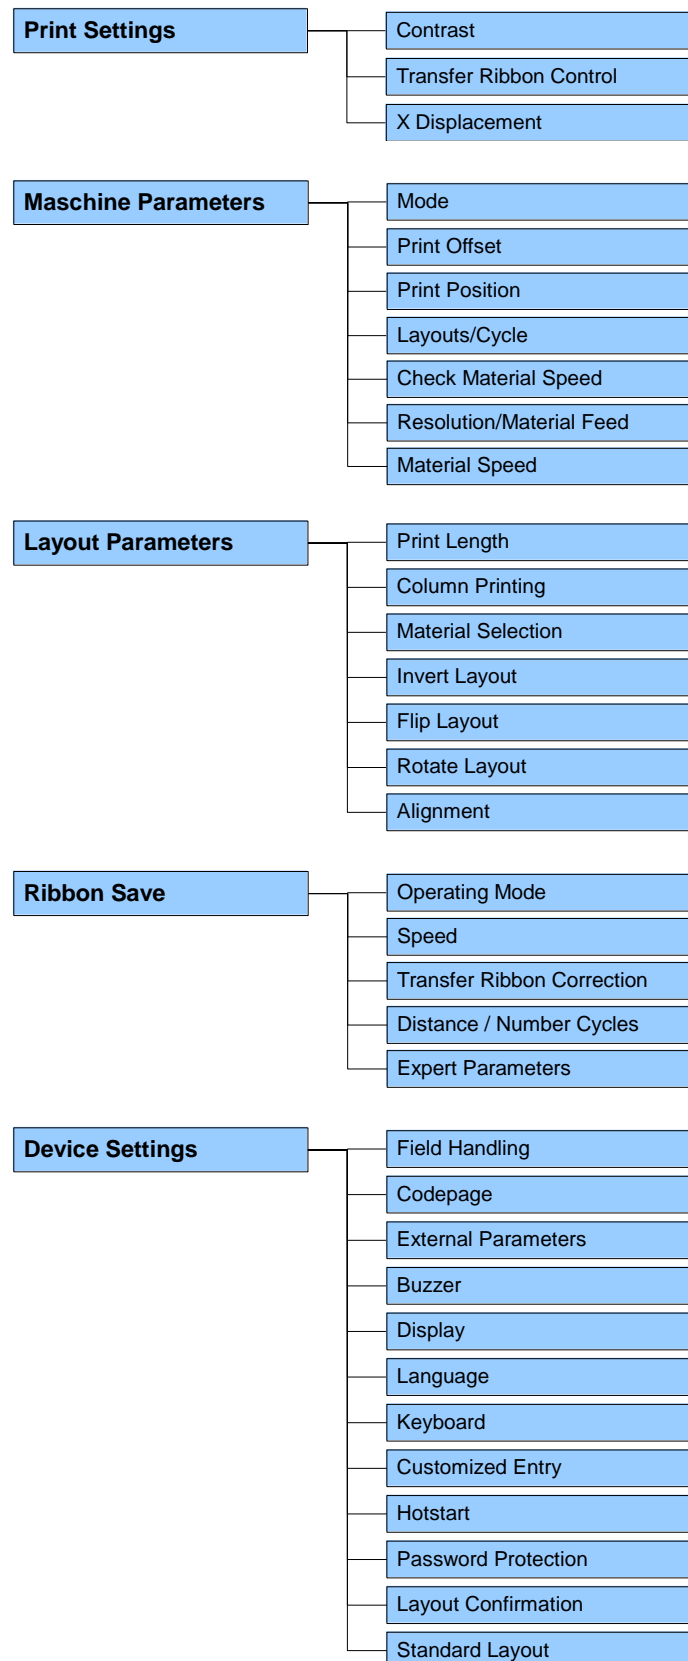


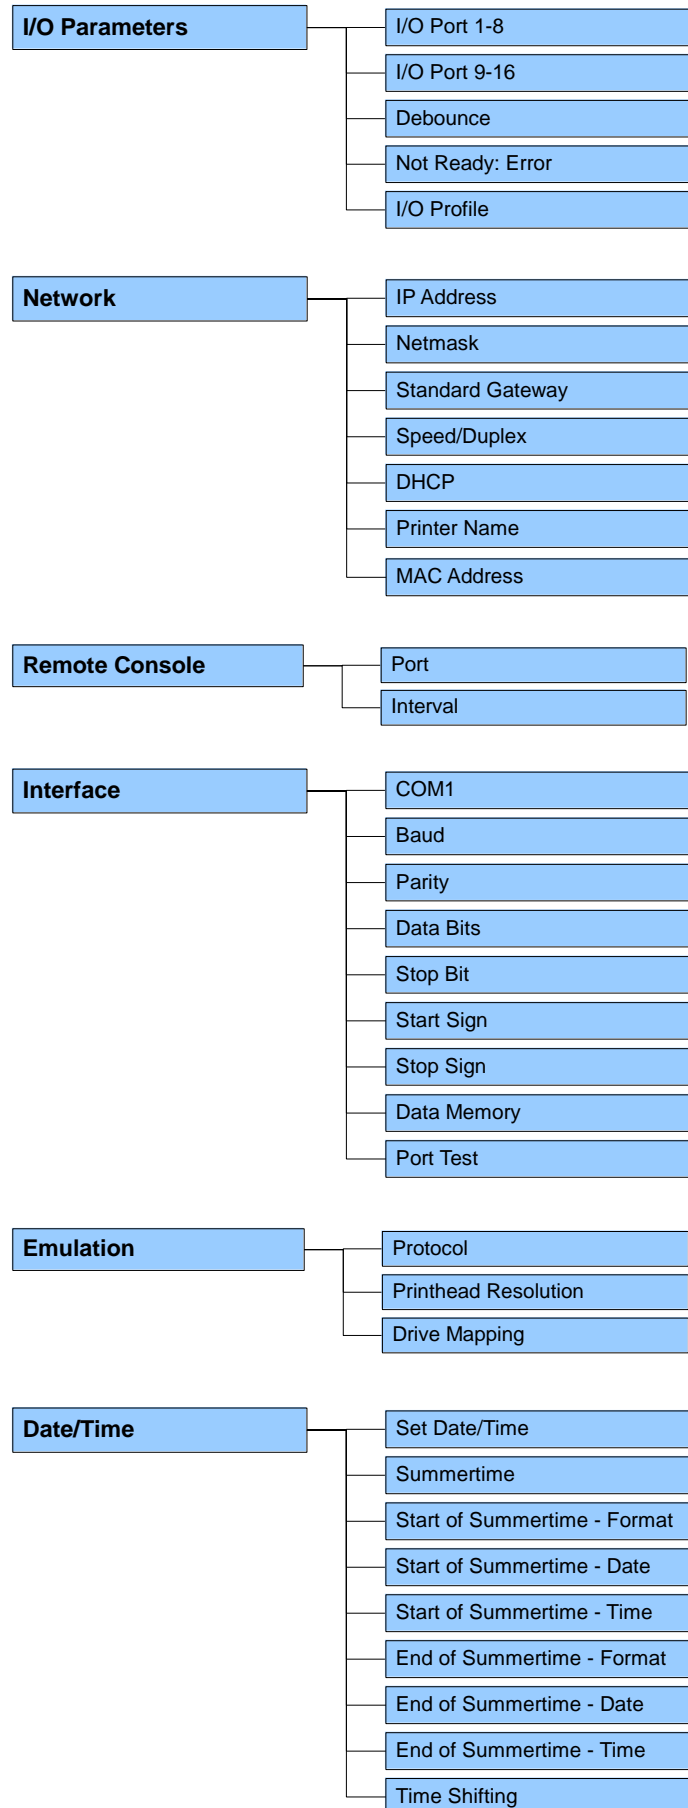


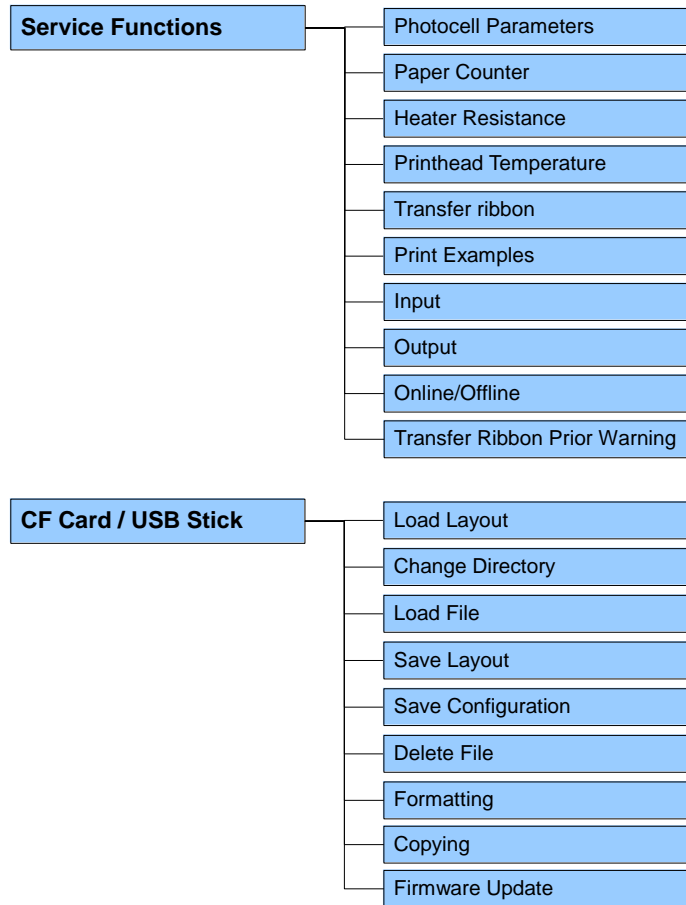

## 7.2 Menu Structure (Intermittent Mode)

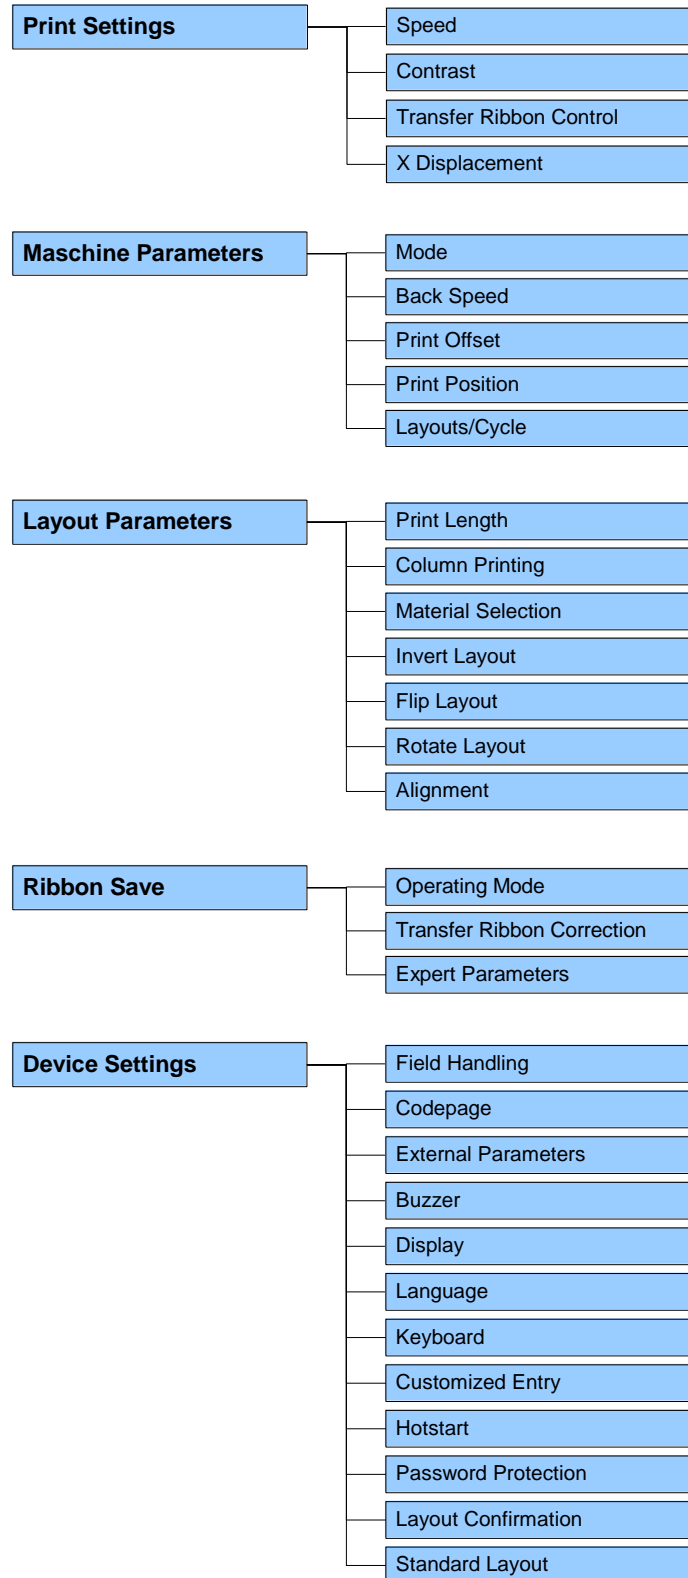

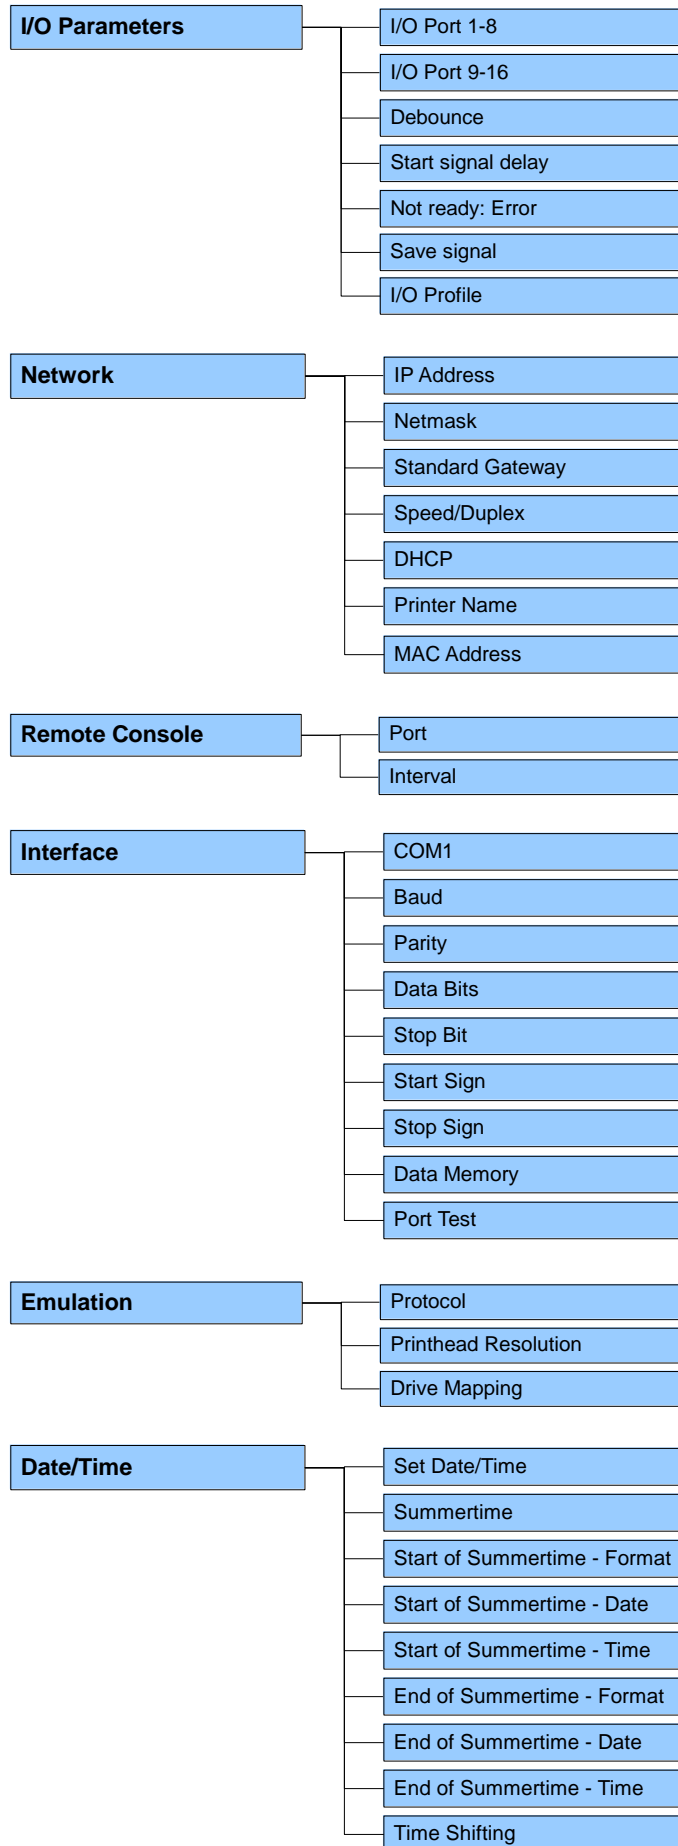

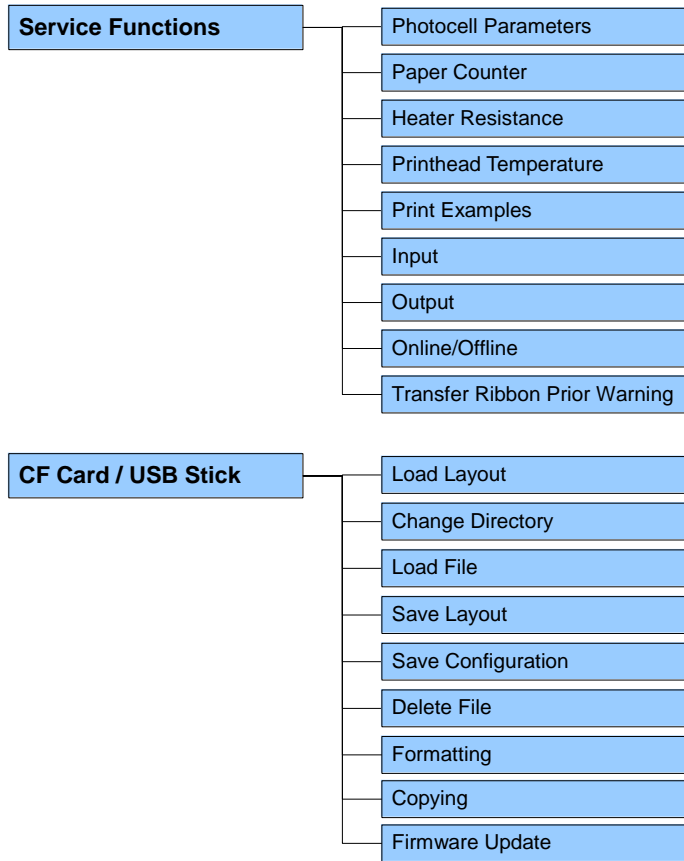




### 7.3 Print Settings

Switch on the control unit and the display shows the main menu.

Press key  to access the function menu.

Press key  to select the menu *Print settings*.

#### Speed (intermittent mode only)

Indication of print speed in mm/s (see Technical Data, page 19). The print speed can be determined for each print order anew.

The setting of print speed affects also the test prints.

Value range: 50 ... 400 mm/s

Step size: 10 mm/s

#### Contrast

Indication of value to set the print intensity when using different materials, print speeds or printing contents.

Value range: 10% ... 200 %.

Step size: 10%

Press key  to arrive the next menu item.

#### Ribbon control

Examination if the transfer ribbon roll is empty and/or if the ribbon was torn at the unwinding roll.

**Off:** The ribbon control is deselected, i.e. the printer continues without an error message.

**On:** The ribbon control is selected, i.e. the current print order is interrupted and an Error Message appears at the printer display.

**Strong sensibility:** The printer reacts immediately to the end of the transfer ribbon.

**Weak sensibility:** The printer reacts at approx. 1/3 more slowly to the end of the transfer ribbon.

Press key  to arrive the next menu item.

#### X displacement


Displacement of the complete print transverse to the paper direction.


The displacement is possible only up to the edges of the printing zone and is determined by the width of the focal line in printhead.


Value range: -90.0 ... +90.0.

## 7.4 Machine Parameters (Continuous Mode)

Switch on the control unit and the display shows the main menu.



Press key  to access the function menu.

Press key  as long as you arrive the *Machine parameters* menu.

Press key  to select the menu.

### Operating mode

It is not possible to start printing by the interface. The machine is always in control mode and the print is released by the control input *Print Start*. The operating mode is normally transferred with each layout otherwise mode *I/O dynamic continuous* is used as standard operating mode.


Press keys  and  to select the desired operating mode and/or to change the mode. The following modes are available:


<b>IO ST</b>	<b>IO static</b> The input signal is evaluated, i.e. it is printed as long as the signal exists. The number of layouts, which was entered at print start, is printed (level evaluation of print start signal).
<b>IO ST F</b>	<b>IO static continuous</b> Corresponds to IO static. Continuous means that not only a defined number of pieces is processed but the same layout is printed as long as new data is transferred by interface.
<b>IO DY</b>	<b>IO dynamic</b> The external signal is evaluated dynamically, i.e. in case the direct print module is in 'waiting' mode a single layout is printed at each signal changing (flank evaluation of print start signal).
<b>IO DY F</b>	<b>IO dynamic continuous</b> Corresponds to IO dynamic. Continuous means that not only a defined number of pieces is processed but the same layout is printed as long as new data is transferred by interface.
<b>Test mode</b>	This operating mode corresponds to mode 2. After the return of the print unit to the zero point of the machine, however, internally a further cycle is started (endurance test).
<b>Direct start</b>	A print order is transferred. After termination of generating process the print order is executed without an external signal.

Press key  to arrive the next menu item.


### Print offset

Indication of distance of the layout (res. the first layout in case more layouts per cycles are to be printed) to the zero point of machine.

Settings possible either in mm or ms. Place cursor at the mm and/or ms position, press key  to change between mm and ms.  
Value range: 1 ... 999 mm

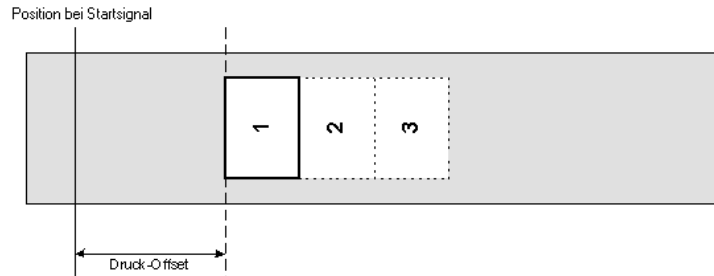

**Figure 18**

Press key  to arrive the next menu item.


### Print position

Indication of position of print carriage in mm.  
Value range: 12 ... 43 mm

Press key  to arrive the next menu item.

### Layouts/cycle

Indication of number of printed layouts per print start (cycle).  
Value range: 1 ... 25.

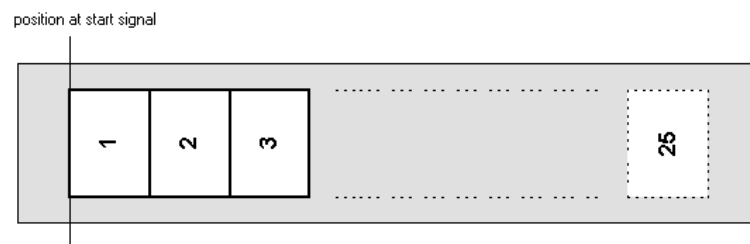

**Figure 19**

Press key  to arrive the next menu item.

### Check speed on start

**Check material speed at print start signal**

**Off (Default):** Material speed is only checked if the set offset value is taken into consideration. It is possible to activate print start signal although the material is not yet in move. However, until the end the material speed has to be inside the valid speed sector as otherwise the print order is cancelled.

**On:** Material speed is checked at print start signal. Is the material speed outside of the valid speed sector then the start signal is ignored.

**Resolution**

Press key  to arrive the next menu item.

**Encoder resolution / material feed per encoder rotation**

Indication of resolution of used encoder and material feed per rotation of encoder in mm. These settings help measuring the material speed. The material feeding per encoder rotation corresponds for instance, in a 1:1 translation between the encoder and the roller, to the roller circumference.


Press key  to arrive the next menu item.


**Material speed**


Indication of material speed (only for reading purposes).

**7.5 Machine Parameters (Intermittent Mode)**

Switch on the control unit and the display shows the main menu.


Press key  to access the function menu.


Press key  as long as you arrive the *Machine parameters* menu.

Press key  to select the menu.

**Mode**

Selection of operating mode.

**No. of pieces** A print order with a defined number of pieces is transferred. After the generating process the target number and the actual number of pieces is shown in the display. A cycle is started via signal input 1 or with key . With each cycle the actual number of pieces is increased by the number of printed layouts. In case the target number of pieces is reached the print order is finished and the display shows again the main menu.

**Continuous** A print order is transferred. After the generating process the number of printed layouts is shown in the display. A cycle is started via signal input 1 or with key . With each cycle the number of printed layouts is increased. The print order is active as long as it is terminated by the user or in case of new data transmission.

**Test mode** This operating mode corresponds to mode 2. After the return of the print unit to the zero point of the machine, however, internally a further cycle is started (endurance test).

**Direct start** A print order is transferred. After termination of generating process the print order is executed without an external signal.

Press key  to arrive the next menu item.

**Back speed**

Indication of back speed of print mechanics after print end in mm/s. Each cycle of the machine consists of printing and return to the zero point of machine. It is possible to set the print speed and back speed separately. The setting range for the back speed is between 50 and 600 mm/s.


Because of this value you can select for low machine clock cycles an operating method which saves the material and increases in this way the life of the printhead.

Because of the mass moment of inertia it could be better to reduce the speed at an installation position of the print unit at >30° horizontal. Value range: 50 ... 600 mm/s.

Press key  to arrive the next menu item.

**Print offset**

Indication of distance of the layout (res. the first layout in case more layouts per cycles are to be printed) to the zero point of machine. Value range: 0 ... 999 mm  
Default: 0 mm

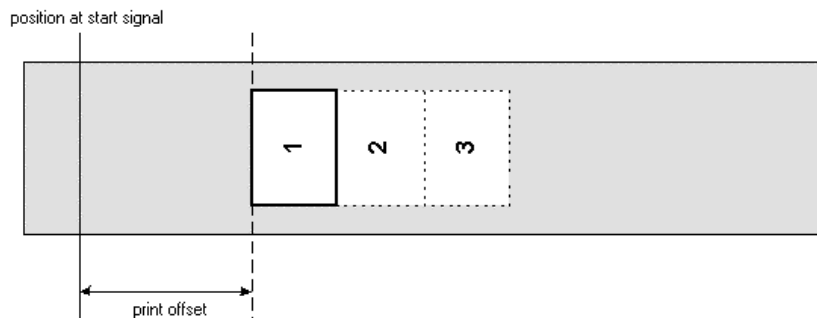

Press key  to arrive the next menu item.


**Print position**

Indication of start position of print carriage in mm. Value range: 0 ... 43 mm  
Default: 3 mm

Press key  to arrive the next menu item.

**Layouts/cycle**


Indication of the number of printed layouts per print start (cycle). Value range: 1 ... 25.

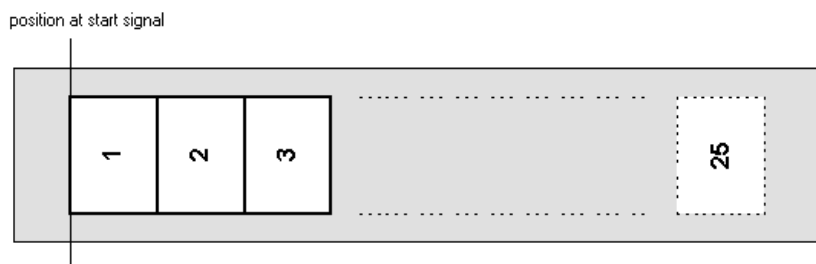


## 7.6 Layout

Switch on the control unit and the display shows the main menu.

Press key **F** to access the function menu.

Press key  as long as you arrive the *Layout* menu.

Press key  to select the menu.

### Print length

Indication of way the print mechanics has to move. The print length depends on the length of the print mechanics.

Press key  to arrive the next menu item.

### Column printing

Indication of width of one layout as well as how many layouts are placed side by side (see chapter 12.1 Column Printing, page 109).

Press key  to arrive the next menu item.

### Material selection

Selection of the used transfer ribbon material.

Press key  to arrive the next menu item.

### Invert layout

**On:** The layout is printed inverse.

**Off:** The function is deactivated.

Press key  to arrive the next menu item.

### Flip layout

The axis of reflection is in the middle of the layout. If the layout width was not transferred to the direct print module, automatically the default layout width i.e. the width of the printhead is used. It is recommended to use layouts with the same width as the printhead. Otherwise this can cause problems in positioning.

Press key  to arrive the next menu item.

### Rotate layout

According to standard the layout is printed ahead with a rotation of 0°. If the function is activated, the layout is rotated by 180° and printed in reading direction.

Press key  to arrive the next menu item.

### Alignment

The adjustment of layout is effected only after *Flip/Rotate layout*, i.e. the adjustment is independent of the functions *Flip layout* and *Rotate layout*.

**Left** = The layout is aligned at the left-most position of printhead.

**Centre** = The layout is aligned at central point of printhead.

**Right** = The layout is aligned at right-most position of printhead.


### 7.7 Ribbon Save

Ribbon save = maximum exploitation of transfer ribbon

**Layout**



**Transfer ribbon w/o ribbon save**

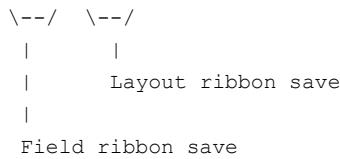

**Transfer ribbon with ribbon save**



**Procedure**

In principle the ribbon save is achieved by the way that the transfer ribbon in phases in those no printing is effected stopped or decelerated. If sufficient time is available, the transfer ribbon which was not used for printing can be retracted to print on it afterwards. The possibility of ribbon save and in this way of the print quality are to be connected with the available time which is needed for decelerating and accelerating of transfer ribbon. There are two different types of ribbon save:

**Field ribbon save**

It is tried to save transfer ribbon with gaps within the layout. Because of the fact that the gaps are usually very small, only little time is available. Therefore a feedback is not reasonable (lack of time).


**Layout ribbon save**


The gaps between the layouts are optimised. Usually more time is available here. The loss of transfer ribbon between the layouts which result from accelerating and decelerating of transfer ribbon can be corrected by means of the return.

## 7.8 Ribbon Save (Continuous Mode)



Switch on the control unit and the display shows the main menu.

Press key **F** to access the function menu.

Press key  as long as you arrive the *Ribbon save* menu.

Press key  to select the menu.

### Mode

Press keys  and  to select the ribbon save mode 'Standard'.

**Standard** Maximum ribbon save performance, i.e. with this setting there is no loss of transfer ribbon (apart from the safety distance of 1 mm, so the print fields are not printed one into the other).  
No settings are allowed with which the ribbon save no more cannot be achieved. This particularly applies for the print offset, which can only be adjusted now in the valid range.

Press key  to arrive the next menu item.

### Speed

Determination of max. print speed.

On the base of this value all necessary calculations e.g. feedback distance and smallest possible print offset are being calculated.

### Example

Speed = 400                      Very good ribbon save result between  
Mode = Standard                50 mm/s and 400 mm/s.

However, if you print with a speed higher than 400 mm/s, then the ribbon save result is decreased and/or the ribbon save can no longer be executed, because the back-feed way was designed to 400 mm/s. Please consider: if speed is set to 400 and only 300 mm/s are printed, then a smaller number of cycles is reached as if speed is set to 300, however a reserve of 100 mm/s is still available.

Therefore the speed value should be always set to the maximum print speed. If the number of cycles is not sufficient, the rewind correction should be applied.

Press key  to arrive the next menu item.

### Transfer ribbon correction

#### TR Correction

**0 mm** = It is always so far retracted that an optimal ribbon save is reached (no loss of transfer ribbon). This is rather rarely realised, as the ribbon position can deviate because of inaccuracies at speed measurement (encoder).


Default: -1 mm



**-xx mm** = The feedback can be made smaller. It causes loss of transfer ribbon but the number of cycles is increased. If the value is increased to the complete backfeed length then the direct print module sets automatically the max. value and no more backfeed is accomplished.

**+xx mm** = The feedback can be made larger. This causes that it is printed onto the transfer ribbon in the previous printout.


**Example**

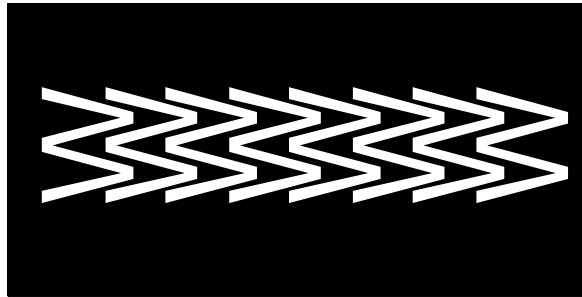

Press key  to arrive the next menu item.


**Performance information**

**sa/mm**: The smallest possible distance of two prints with full ribbon save (the print offset must be set to the minimum value). As basis for the calculation the set ribbon save parameters are used, as well as mode and especially the indicated max. print speed.

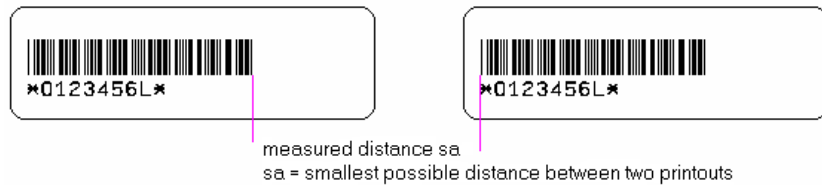


**cmin**: Max. number of cycles per minute.

**so/mm**: Indicates the loss of ribbon save, i.e. how many mm transfer ribbon is effectively lost.

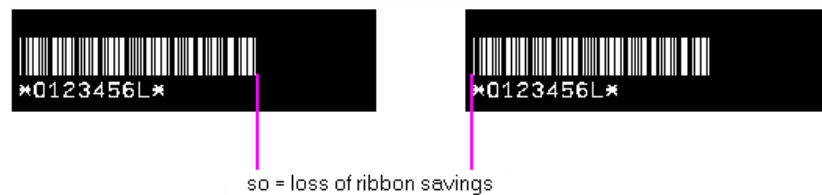

Press key  to arrive the next menu item.

### Expert parameters

This menu item is password protected. Enter password, press key  to confirm the input and the following parameters are indicated:

#### Printhead down time

##### **PhDownT = printhead down time in ms:**

This is used from ribbon save algorithm for the calculation of start time of printhead upwards movement.

#### Ribbon motor early start time

##### **REStartT = ribbon motor early start time in ms:**

This value is added to the increase time of transfer ribbon movement. Time indication for the time between 'motor reached material speed' and 'printhead burns'.

If the same value is entered as for PhDownT, the printhead upwards movement is not started before the transfer ribbon motor reached the material speed.

Press key  to arrive the next menu item.

#### Minimal print speed

##### **MinSpeed = minimal print speed:**

If the min. print speed is increased, the max. number of cycles is also increased.

#### Use max. speed

##### **USMxSped = use maximum speed:**

Use the speed parameter as maximum speed. If the material speed exceeds the maximum speed the print is interrupted as long as the material speed is again under the maximum speed.

Press key  to arrive the next menu item.

#### Printhead up time

##### **PHUpT = printhead up time in ms:**

Is used from ribbon save algorithm to calculate if a field ribbon save can be made or not.

#### Valve reaction time

##### **PhVReactT = valve reaction time in ms:**

It is calculated when the printhead upwards movement is started.

Press key  to arrive the next menu item.

#### Print offset border calculation

##### **Calcoff = Turn On/Off print offset border calculation:**

If this parameter is set to Off, then a smaller offset as the required print offset can be entered.

Press key  to arrive the next menu item.

#### Ribbon motor stop delay time

##### **RibMotStpDlayT = ribbon motor stop delay time**

Deceleration time in ms in which the transfer ribbon motor is still moved with constant speed before stopping.

This can be used to correct black bars at the end of print or to provide a longer cooling for the printhead.

Press key  to arrive the next menu item.

**Field ribbon saving****FieldRS = field ribbon saving:**

**Off:** Field ribbon save mode Off.

**PHOnly:** Only the printhead is moved. The transfer ribbon is not stopped.

**Normal:** Field ribbon save is executed only if the transfer ribbon motor is completely stopped.

**Strong:** Field ribbon save is executed, even if the transfer ribbon motor is not stopped.

**Rewind speed****Rwind v = rewind speed in mm/s:**

Indication of rewind in mm/s.

Press key  to arrive the next menu item.

**Ribbon save priority****Ribbon save quality:**

If the ribbon save algorithm is not able due to fast changes in material speed to keep the demanded ribbon save (ribbon correction) then the printout can be shifted to obtain the demanded transfer ribbon saving

**Print position:**

If the ribbon save algorithm is not able due to fast changes in material speed to keep the demanded ribbon save (ribbon correction) then the print position can be kept by an increased transfer ribbon use.

Press key  to arrive the next menu item.

**Speed 1. Field**

If 0 (default value) is set, the parameter has no influence to the ribbon save. Otherwise the ribbon save algorithm does not use the measured speed for the calculation of layout ribbon save but the speed that is indicated here.

Press key  to arrive the next menu item.

**Tension**

Indication of length, which is transported forward after measuring the transfer ribbon.

Press key  to arrive the next menu item.


**Save start in normal mode****SaveStartInNormMode**


If a start signal comes during the printing process the print is not interrupted but the print for the start signal is attached directly to the current print.

## 7.9 Ribbon Save (Intermittent Mode)



Switch on the control unit and the display shows the main menu.


Press key **F** to access the function menu.

Press key  as long as you arrive the *Ribbon save* menu.

Press key  to select the menu.

### Ribbon save mode

Press key  and  to select the ribbon save mode 'Standard'.

Press key  to arrive the first menu item.

### Transfer ribbon correction

#### TR Correction


**0 mm** = It is always so far retracted that an optimal ribbon save is reached (no loss of transfer ribbon). This is rather rarely realised, as the ribbon position can deviate because of inaccuracies at speed measurement (encoder).

Default: -1 mm

**-xx mm** = The feedback can be made smaller. It causes loss of transfer ribbon but the number of cycles is increased. If the value is increased to the complete backfeed length then the direct print module sets automatically the max. value and no more backfeed is accomplished.


**+xx mm** = The feedback can be made larger. This causes that it is printed onto the transfer ribbon in the previous printout.

### Example

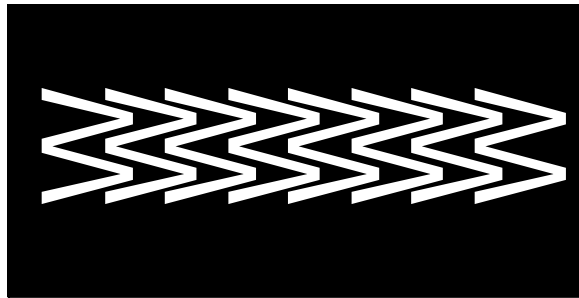

Press key  to arrive the next menu item.

**Expert parameters**

This menu item is password protected. Enter password, press key  to confirm the input and the following parameters are indicated:

**Printhead down time****PhDownT = printhead down time in ms:**

This is used from ribbon save algorithm for the calculation of start time of printhead upwards movement.

**Printhead up time****PhUpT = printhead up time in ms:**

Is used from ribbon save algorithm to calculate if a field ribbon save can be made or not.

Press key  to arrive the next menu item.

**Printhead valve reaction time****PhVReactT = valve reaction time in ms:**

It is calculated when the printhead upwards movement is started.

Press key  to arrive the next menu item.

**Tension**

**Tension:** Indication of length, which is transported forward after measuring the transfer ribbon.

**Ribbon Mode**


**0 =** The transfer ribbon is retracted after each printout over the complete print length, i.e. no ribbon save between the individual layouts.


**1 =** The transfer ribbon is only retracted over the printed sector, i.e. the gaps between the layouts were not optimised.


When changing the layouts, the transfer ribbon is positioned automatically.

## 7.10 Device settings

Switch on the control unit and the display shows the main menu.

Press key  to access the function menu.

Press key  as long as you arrive the *Device settings* menu.

Press key  to select the menu.

### Field handling

**Off:** The complete print memory is deleted.

**Keep graphic:** A graphic res. a TrueType font is transferred to the direct print module once and stored in the internal memory of device. For the following print order only the modified data is transferred to the direct print module. The advantage is the saving of transmitting time for the graphic data.

The graphic data created by the direct print module itself (internal fonts, bar codes, ...) is generated only if they were changed. The generating time is saved.

**Delete graphic:** The graphics res. TrueType fonts stored in the internal memory is deleted but the other fields are kept.

Press key  to arrive the next menu item.

### Codepage

Indication of the font used in the direct print module.

The following possibilities are available:

ANSI character set / Codepage 437 / Codepage 850 / GEM German / GEM English / GEM French / GEM Swedish / GEM Danish.

Press key  to arrive the next menu item.

### External parameters

**Layout dimension only:** The parameters for layout length, gap length and layout width can be transferred to the printing system. All other parameter settings are to be made directly at the printing system.

**On:** Sending parameters such as speed and contrast via our design software to the printing system. Parameters which are set directly at the printing system before are no longer considered.

**Off:** Only settings made directly at the printing system are considered.

Press key  to arrive the next menu item.

### Buzzer

**On:** An acoustic signal is audible when pressing a key.

Value range: 1 ... 7.

**Off:** No signal is audible.

### Display

Setting of display contrast.










Value range: 35 ... 85.

Press key  to arrive the next menu item.

### Language

Selection of language the display indicates texts in the graphic display.


At the moment the following languages are available: German, English, French, Spanish, Portuguese, Dutch, Italian, Danish, Finnish, Polish, Czech, Hungarian, Russian, Chinese (option), Ukrainian.

- Press key  to arrive the next menu item.
- Keyboard layout** Selection of region for the desired keyboard layout.  
The following possibilities are available: Germany, England, France, Greece, Spain, Sweden and US.
- Press key  to arrive the next menu item.
- Customized entry** **On:** The question referring the customized variable appears once before the print start at the display.  
**Auto:** The question referring the customized variable appears after every printed layout.  
**Off:** No question appears at the display. In this case the stored default value is printed.
- Press key  to arrive the next menu item.
- Hotstart** **On:** Continue an interrupted print order after switching on the printer anew  
**Off:** No question appears at the display. In this case the stored default value is printed (12.2, page 110).
- Press key  to arrive the next menu item.
- Autoload** **On:** A layout which was loaded once from CF card can be loaded again automatically after a restart of printing system.  
Procedure: The used layout is saved onto CF card. The layout is loaded from CF card and printed. After switching the printer Off and again On, the layout is loaded from CF card automatically and can be printed again. Press key  to start the print with input of number of layouts.
-  **NOTICE!**  
The last loaded layout from CF card is always again loaded after a restart of printer.
- Off:** After a restart of printer the last used layout must be again loaded manually from CF card.
-  **NOTICE!**  
A common use of the functions Autoload and Hotstart is not possible. For a correct Autoload procedure the Hotstart must be deactivated in the printing system.
- Press key  to arrive the next menu item.
- Password protection** By a password several functions can be blocked, so the user cannot work with them. There are several applications in which the use of password protection makes sense (see chapter 12.3, page 112).
- Press key  to arrive the next menu item.
- Layout confirmation** **On:** A new print order is only printed after confirmation at the device. An already active continuing print order is printed as long as the confirmation is effected at the device.  
**Off:** No query appears at the display of control unit.

Press key  to arrive the next menu item.

### Standard layout

**On:** If a print order is started without previous definition of layout, the standard layout is printed.

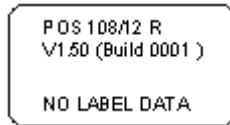

POS 108/12 R  
V1.50 (Build 0001 )  
NO LABEL DATA


**Off:** If a print order is started without previous definition of layout, an error message appears in the display.




## 7.11 I/O Parameters

Switch on the control unit and the display shows the main menu.

Press key **F** to access the function menu.

Press key  as long as you arrive the *I/O parameters* menu.

Press key  to select the menu.

### I/O Port 1-8 and I/O Port 9-16

Definition of port functions:

2 sign show the current setting for each port.

The first sign specifies the following:

**I** = Port operates as Input

**O** = Port operates as Output

**N** = Port has no function (not defined)

These settings cannot be modified.

The second sign specifies the following:

**+** = Active signal level is 'high' (1)

**-** = Active signal level is 'low' (0)

**x** = Port is deactivated

**&** = Function is executed at each change of the signal level

**s** = Status can be enquired/influenced  
(in connection with Netstar PLUS) by interface  
The printer-internal function is deactivated.

Press key  to arrive the next menu item.

### Debounce

Indication of debounce time of the dispenser input. The setting range of the debounce time is between 0 and 100 ms.

In case the start signal is not clear then you can debounce the input by means of this menu item.

Press key  to arrive the next menu item.

### Start signal delay (intermittent mode)

Indication in time per second of the delay for the start signal.

Value range: 0.00 ... 9.99.

Press key  to arrive the next menu item.

### Not ready: Error

**On:** If a print order is active but the direct print module is not ready to process the order (e.g. if it is already in 'printing' mode), then an error message appears.

**Off:** No error message appears.


Press key  to arrive the next menu item.

### Save signal (intermittent mode)

**On:** The start signal for the next label can already be released during printing the current label. The signal is registered from the printing system. The printing system starts printing the next label immediately after finishing the current one. Therefore time can be saved and performance be increased.

**Off:** The start signal for the next label can only be released if the current label is printed to the end and the printing system is again in 'waiting' state (output 'ready' set). If the start signal was released already before, so this is ignored.

**I/O Profile**


Press key  to arrive the next menu item.


Selection of the available configurations *Std\_Direct* (factory setting), *StdFileSelDirect*, *SP\_Direct0* or *Old\_Direct0*.


The corresponding assignment is indicated in chapter 4.1, page 21.

**7.12 Network**

Switch on the control unit and the display shows the main menu.

Press key  to access the function menu.


Press key  as long as you arrive the *Network* menu.


Press key  to select the menu.


For more information, please see the separate manual.

**7.13 Remote Console**

Switch on the control unit and the display shows the main menu.

Press key  to access the function menu.


Press key  as long as you arrive the *Remote console* menu.


Press key  to select the menu.


For more information please contact our sales department.

## 7.14 Interface

Switch on the control unit and the display shows the main menu.

Press key  to access the function menu.

Press key  as long as you arrive the *Interface* menu.

Press key  to select the menu.

### COM1 / Baud / P / D / S

#### COM1:

0 - serial interface Off.  
1 - serial interface On.  
2 - serial Interface On, no error message occurs in case of a transmission error.

#### Baud:

Indication of bits which are transferred per second (speed of data transfer).

Value range: 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200.

#### P = Parity:

N - No parity  
E - Even  
O - Odd

Please observe that the settings correspond to those of the direct print module.

#### D = Data bits:

Setting of data bits.  
Value range: 7 or 8 Bits.

#### S = Stop bits:

Indication of stop bits between bytes.  
Value range: 1 or 2 stop bits.

Press key  to arrive the next menu item.

### Start sign / End sign

**SOH:** Start of data transfer block → Hex format 01

**ETB:** End of data transfer block → Hex format 17

Two different start / end signs can be set. The settings are normally SOH = 01 HEX and ETB = 17 HEX. Several host computers cannot process these signs and therefore SOH = 5E HEX and ETB = 5F cannot be set.

Press key  to arrive the next menu item.

### Data memory

**Standard:** After starting a print order the printer buffer receives data as long as it is filled.




**Advanced:** During a current print order data is received and processed.

**Off:** After starting a print order no more data is received.

Press key  to arrive the next menu item.


### Port test


Check whether the data are transferred via the interface.


Press the  and  keys to select standard (on). Press the  key and the data sent via any port (COM1, LPT, USB, TCP/IP) is printed.

## 7.15 Emulation

Switch on the control unit and the display shows the main menu.

Press key  to access the function menu.

Press key  as long as you arrive the *Emulation* menu.


Press key  to select the menu.

### Protocol

**CVPL:** Carl Valentin Programming Language

**ZPL:** Zebra® Programming Language

Change between CVPL protocol and ZPL II® protocol.

Press key  to confirm the selection.

The direct print module performs a restart and ZPL II® commands are transformed into CVPL commands internally by the direct print module and then executed by the device.

In menu Protocol, press key  to arrive the next menu item.

### Printhead resolution

At activated ZPL II® emulation the printhead resolution of the emulated device must be set, e.g. 11.8 Dot/mm (= 300 dpi).



#### NOTICE!

If the printhead resolution of the Zebra® printer differs from that of the Valentin device, then the size of objects (e.g. texts, graphics) complies not exactly.

Press key  to arrive the next menu item.

### Drive mapping

The access to Zebra® drives

B: CF card

R: RAM Disk (standard drive, if not indicated)

is rerouted to the corresponding Valentin drives

A: CF

R: RAM Disk

This can be necessary if the available space on the RAM disk (at present 512 KByte) is not sufficient or if bitmap fonts are downloaded to the device and be stored permanently.




#### NOTICE!


As the build-in fonts in Zebra® printers are not available in Valentin devices this can cause small differences in the text image.

## 7.16 Date & Time





Switch on the control unit and the display shows the main menu.

Press key **F** to access the function menu.

Press key  as long as you arrive the *Date/Time* menu.

Press key  to select the menu.

### Setting of date and time

The upper line of display shows the current date, the second line the current time. Press keys  to  arrive the next input field. Press keys  and  to increase and/or decrease the figures at the cursor position.

Press key  to arrive the next menu item.

### Summertime

**On:** Device automatically adjust clock for daylight saving changes.  
**Off:** Summertime is not automatically recognized and adjusted.

Press key  to arrive the next menu item.

### Start of summertime – Format

Select the format in which you want to define beginning summertime. The above example indicates the default setting (European format).

DD = day      WW = week      WD = weekday  
MM = month    YY = year      next day = only next day is taken into consideration

Press key  to arrive the next menu item.

### Start of summertime – Date

By means of this function you can enter the date at which summertime has to start. This entry refers to the previously selected format.

Press key  to arrive the next menu item.

### Start of summertime – Time

By means of this function you can define the time when you want to start summertime.

Press key  to arrive the next menu item.

### End of summertime – Format

Select the format in which you want to define end of summertime. The example above indicates the default setting (European format).

Press key  to arrive the next menu item.

### End of summertime – Date

By means of this function you can define the date when you want to stop summertime. The entry refers to the previously selected format.

Press key  to arrive the next menu item.

### End of summertime – Time

By means of this function you can define the time when you want to stop summertime.

Press key  to arrive the next menu item.

### Time shifting

By means of this function you can enter time shifting in hours and minutes (for automatically adjustment from summer and wintertime). This entry refers to the currently set device time.


## 7.17 Service Functions




### NOTICE!

So that the distributor res. the manufacturer in case of service can offer fast support the necessary information such as selected parameters can be taken directly from the service functions menu of the device.

Switch on the control unit and the display shows the main menu.

Press key  to access the function menu.

Press key  as long as you arrive the *Service functions* menu.

Press key  to select the menu.

### Photocell parameters

**H** = Cover switch  
Available only if cover switch is available.  
0 = cover open  
1 = cover closed.

**P** = Pressure  
Indication of 0 or 1 for the compressed-air control.

**R1** = not used

**R2** = Transfer ribbon unwinding roll  
Indication of value 0 to 3 for the status of transfer ribbon unwinding roll. 4 possibilities are indicated (no marking in photocell, marking from right, marking from left, marking completely in photocell).

**E** = Encoder  
Indication of current state of encoder

**C** = Carriage  
Indication of print carriage position.

Press key  to arrive the next menu item.

### Paper counter

**D**: Indication of printhead attainment in meters.

**G**: Indication of device attainment in meters.

Press key  to arrive the next menu item.








### Heater resistance



To achieve a high print quality, the indicated Ohm value must be set after an exchange of printhead.

Press key  to arrive the next menu item.

### Printhead temperature

Indication of printhead temperature. The printhead temperature corresponds normally to the room temperature. In case the maximum printhead temperature is exceeded, the current print order is interrupted and an error message appears at the display.


	Press key  to arrive the next menu item.
<b>Ribbon</b>	Selection of the used transfer ribbon length (300 m, 450 m, 600 m). With smaller ribbons, a higher number of cycles can be reached.
	Press key  to arrive the next menu item.
<b>Print examples</b>	<p><b>Settings</b> = Printout of all printer settings such as speed, layout and transfer ribbon material.</p> <p><b>Bar codes</b> = Printout of all available bar code types.</p> <p><b>Fonts</b> = Printout of all available font types.</p>
	Press key  to arrive the next menu item.
<b>Input</b>	Indication of level for IO parameters input. 0 = Low 1 = High
	Press key  to arrive the next menu item.
<b>Output</b>	Indication of level for IO parameters output. 0 = Low 1 = High
	Press key  to arrive the next menu item.
<b>I/O Status</b>	<p>Relevant results are counted and registered in RAM memory. The protocols get lost after switching off the device.</p> <p><b>RInt</b> = Real Interrupts The start input impulses are counted directly at the Interrupt.</p> <p><b>Dbnc</b> = Debounced The start input impulses that are longer than the set debounce time are counted. Only these start impulses can lead to a print. If a start impulse is too short, no print is released. This is recognized by the fact that RInt is counted, Dbnc not.</p> <p><b>NPrn</b> = Not Printed The debounced start input impulses that have not lead to a print are counted. Causes: no active print order, print order stopped (manually or because of an error) or the printing system is still active with the processing of a print order.</p> <p><b>PrtStrtReset</b> = The counters are reset.</p> <p><b>PrtStrtTime</b> = Measured length of the last start impulse in ms.</p>
	Press key  to arrive the next menu item.
<b>Online / Offline</b>	<p>This function is activated e.g. if the transfer ribbon is to be changed. It is avoided that a print order is processed although the module is not ready. If the function is activated then press the key  to change between Online and Offline mode. The respective state is indicated in the display. Standard: Off</p>

- Online:** Data can be received by interface. The keys of the foil keyboard are only active, if you changed in the Offline mode with key .
- Offline:** The keys of the foil keyboard are still active but received data are not processed. If the module is again in Online mode then new print orders can be again received.
- Press key  to arrive the next menu item.
- Transfer ribbon advance warning** Before the end of transfer ribbon, a signal is send by the control output.
- Warning diameter** Setting of transfer ribbon advance warning diameter.  
In case you enter a value in mm then a signal appears via control output when reaching this diameter (measured at transfer ribbon roll).
- Ribbon advance warning mode** **Warning:** When reaching the transfer ribbon advance warning diameter, the corresponding I/O output is set.  
**Reduced print speed:** Speed on which the printing speed is to be reduced.  
**Error:** The printing system stops when reaching the transfer ribbon advance warning diameter with the message 'too less ribbon'.
- Reduced print speed** Setting of the reduced print speed in mm/s. This can be set in the limits of the normal print speed.

## 7.18 Main Menu

Switch on the control unit and the display shows the main menu. The main menu shows information such as device type, current date and time, version number of firmware and the used FPGA.

The selected display is shown for a short time, then the indication returns to the first information.


Press key  to arrive the next information display.






## 7.19 Display during Printing

```
TESTETI: wait
printed: 00000
```


The direct print module is in 'waiting' mode, i.e. ready to receive data.

Press key  to interrupt an active print order.  
The display shows the following:


```
TESTETI: ST 0
printed: I00000
```


Press key  key to continue the interrupted print order.  
In case an active print order was interrupted by means of key   
and afterwards key  pressed, then the print order was cancelled  
and the direct print module changes to the main menu.

```
Material speed
  300 mm/s
```

During the print order the number of layouts which already printed is indicated. Press the  key to change to the menu item 'material speed'.

```
Print offset
(mm)      10.0
```

Press the  key to change to the menu item 'print offset'. The print offset can be changed during the running print order.

Press the  key and the direct print module changes again to the initial position, i.e. to the 'waiting' mode.



## 8 Compact Flash Card / USB Memory Stick

### 8.1 General Information

On the back side of the label printer is the slot for the CF card and the USB port for inserting the USB memory stick.


The mass storage menu (memory menu) permits the access to CF cards or USB memory sticks attached to the printer. Among loading and saving labels simple operations of contents are possible such as delete files/directories, copy files/directories or formatting.



#### NOTICE!

In case of a malfunction of the original memory medium it is recommend to copy the most important data by means of a commercial Card Reader.

### 8.2 Display Structure

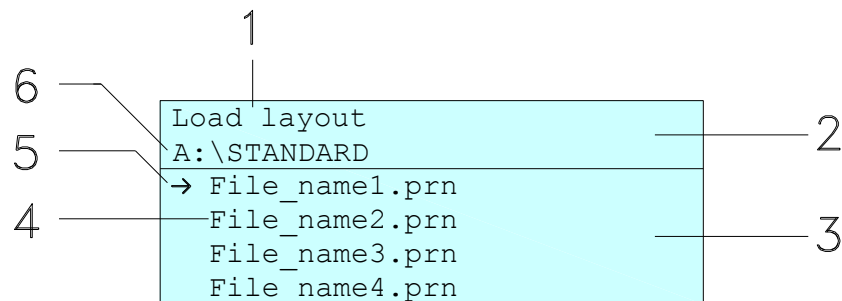

1 = Current function

2 = 2-lined header

3 = Scroll range

4 = File names / directory names

5 = Marking of the selected file (cursor)

6 = Current path (drive:\directory)

The two-line header (2) contains the current function name (1) and the current path (6).

The four-line scroll range indicates a list of files/directories. The first entry (marked with an arrow) is the active one. To this file/directory and/or these files/directories refer all actions.



#### NOTICE!

Three drives are available.








 

 








A:\ indicates the CF card.

U:\ indicates the USB memory stick.  
(only one stick can be inserted)

R:\ indicates the RAM (ZPL Emulation).

### 8.3 Navigation

The memory menu is operated with the keys of the foil keyboard of the control unit or with different function keys of an attached USB keyboard.

		Return to the previous menu.
		Function <i>Load layout</i> : Change to the File Explorer. File Explorer: Change to the 'context menu'.
		Select a file/directory if a multiple selection is possible.
		Main menu: Access to the memory menu. File Explorer: Create a new file.
		Start the current function for the active file/directory.
		Change to the superordinate directory.
		Change to the currently marked directory.
		In the current directory scroll upwards.
		In the current directory scroll downwards.


## 8.4 Define User Directory




### NOTICE!

An user directory is to be defined:

- before using and/or navigating through the memory menu.
- if formatting of CF card is effected at PC and thus the STANDARD directory was not created automatically.

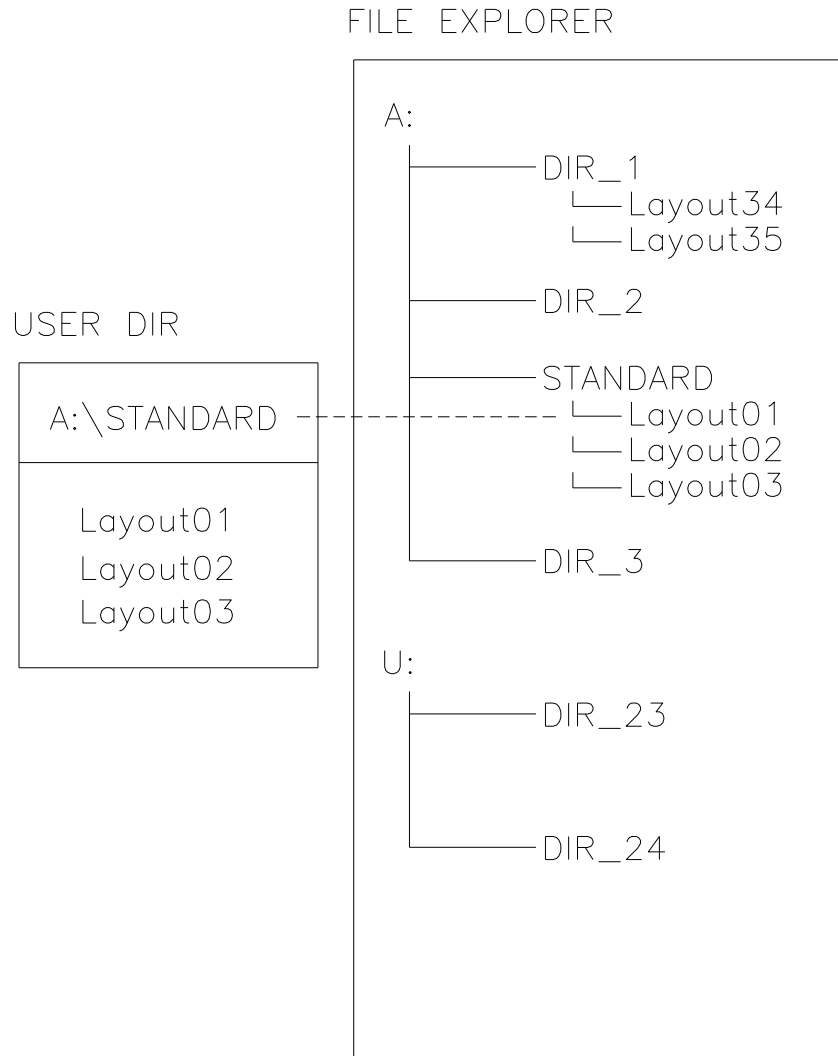


The user directory is the root directory in which the user saves usually the most frequently used files/layouts. The utilisation of the user directory permits the quick and direct access to the files saved in the defined user directory. The definition of an user directory saves thus a long search of the file to be printed.


Press key  to access to the memory menu.

Press key  to call the File Explorer.

File Explorer A:\	Context Menu A:
[Drives] →<STANDARD> <DIR_1>	→Set as user dir Format Copy

Press keys , , ,  to select the directory.

Press key  to display all available functions.

Select the function *Set as user dir* and press key  to confirm the selection.


Press key  as long as the printer returned to the main menu.





At the next start of the memory menu the selected directory is displayed as user directory.


## 8.5 Load Layout

Loads a layout within a defined user directory. The function allows quick access to the desired layout as only layout files are displayed and directories hidden.

Load layout A:\STANDARD
→File_name1.prn File_name2.prn File_name3.prn File_name4.prn


Press key  to access to the memory menu.

Press keys , , ,  to select the layout to be printed.

Press key  to confirm the selection.

The printer display shows automatically the window to insert the number of copies which are to print.

Select the number of copies which are to be printed.

Press key  to start the print order.



### NOTICE!

The directory CANNOT be changed here. A change of directory MUST be made in the File Explorer with the function *Change directory*.

## 8.6 File Explorer

The File Explorer is the file manager of the printing system. The File Explorer provides the main functions for the user interface of memory menu.


In the user directory, press key **F** to access to the File Explorer.

Following functions are available:

- Change drive and/or directory
- Load file
- Save layout and/or configuration
- Delete file(s)
- Format CF card
- Copy file(s)

### Change drive/directory

Selection of drive and/or directory in which the files are saved.

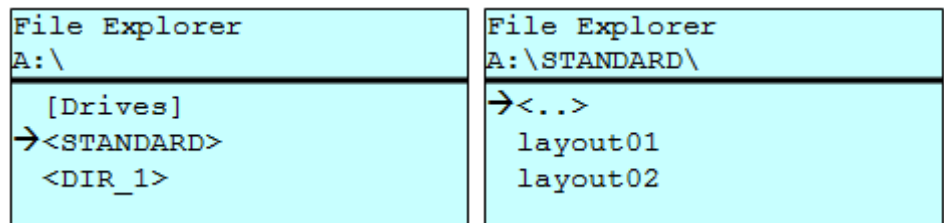

Press key **M** to access to the memory menu.

Press key **F** to call the File Explorer.

Press keys **↑**, **↓**, **←**, **→** to select the directory.


Press key **Enter** to confirm the selection.

The selected directory is now displayed.

**Load file**


Loads a file. This can be a configuration saved before, a layout, etc.

```
Load file
A:\STANDARD\
-----
<..>
->layout01
   layout02
```

Press key  to access to the memory menu.

Press key  to call the File Explorer.

Press keys  and  to select the file.

Press key  to load the selected file.


If the selected file is a layout, then the number of copies to print can be entered immediately.

**Save layout**

Saves the currently loaded layout under the selected name.


```
Save file
A:\STANDARD
-----
->Save layout
   Save config.

noname
```

Press key  to access to the memory menu.

Press key  to call the File Explorer.

Press key  to change to the menu *Save file*.

Select the function *Save layout* and confirm the selection with key .


If an USB keyboard is attached a new file name for *noname* can be assigned.




**Save configuration**


Saves the complete, current printer configuration under the selected name.

```
Save file
A:\STANDARD
-----
Save layout
→ Save config.
-----
config.cfg
```

Press key  to access to the memory menu.

Press key  to call the File Explorer.

Press key  to change to the menu *Save file*.


Select the function *Save configuration* and confirm the selection with key .

If an USB keyboard is attached a new file name for *config.cfg* can be assigned.

**Delete file(s)**


Deletes one or more files and/or directories irrevocably. With the deletion of a directory both the contained files and the subdirectories are deleted.


File Explorer A:\STANDARD\ ----- layout01 *	Context menu 2 objects marked ----- → Delete Copying
→ layout02 *	
layout03	
layout04	

Press key  to access to the memory menu.

Press key  to call the File Explorer.

Press keys  and  to select the file.

Press key  to mark the files which are to be deleted. The marked entries are listed with \*. Repeat this procedure until all desired files and/or directories are marked for deletion.

Press key  to call the context menu.

Select the function *Delete* and confirm the selection with key .

**NOTICE!**

The deleting procedure is irreversible!


**Formatting**


Formats irrevocably the memory card.

**NOTICE!**


USB sticks cannot be formatted at the printer!


File Explorer DRIVES →A: 954Mb free U: No media	Context menu A:\ Set as user dir →Formatting Copy
--	---

Press key  to access to the memory menu.

Press key  to call the File Explorer.

Select the drive which is to format with the navigation keys.


Press key  to call the context menu.

Select the function *Format* and confirm the selection with key .

**Copying**


Creates a duplicate of the original file and/or the original directory to make changes independently of the original.


File Explorer A:\STANDARD\ layout01 * → layout02 * layout03 layout04	Context menu 2 objects marked Delete → Copying
---	---

Press key  to access to the memory menu.

Press key  to call the File Explorer.


Press keys  and  to select the file.

Press key  to mark the files which are to be copied. The marked entries are listed with \*. Repeat this procedure until all desired files and/or directories are marked for copying.

Press key  to call the context menu.

Select the function *Copy* and confirm the selection with key .

Select Destination DRIVES → A: 954Mb free
---

Select the target storage with the navigation keys and press key  to confirm the selection.

## 8.7 Firmware Update

Starting from firmware version 1.58 it is possible to make a firmware update also via the memory menu. Both the USB stick as well as the CF card can be used for this.

### Procedure

On the CF card / USB memory stick a directory is created in which the necessary update files are stored (firmware.prn, data.prn). By means of the function *Load file* the file *firmware.prn* is selected/loaded. In the first step the printer executes the firmware update. After the necessary restart automatically the file *data.prn* is loaded. In this way the remaining components were updated. is After a renewed restart the update procedure is finished.

## 8.8 Filter

For certain functions a filter mask or a file name of a file which is to be saved can be entered. This input is indicated in the path line. It is possible with the filter mask to look for certain files. For example, with the input of 'L' only the files are listed whose character string starts with 'L' (regardless of upper and lower cases).

### Without filter

```
Load layout
A:\STANDARD
→First_file.prn
  Layout_new.prn
  Sample.prn
  12807765.prn
```

### With filter

```
Load layout
L
→Layout_new.prn
```

## 9 Maintenance and Cleaning



### DANGER!

Risk of death by electric shock!

⇒ Disconnect the direct print module from power supply before performing any maintenance work.



### NOTICE!

When cleaning the label printer, personal protective equipment such as safety goggles and gloves are recommended.

### Maintenance schedule

Maintenance task	Frequency
General cleaning (see section 9.1, page 85).	As necessary.
Cleaning transfer ribbon drawing roller (see section 9.2, page 86).	Each time the transfer ribbon is changed or when the printout is adversely affected.
Cleaning printhead (see section 9.3, page 85).	Each time the transfer ribbon is changed or when the printout is adversely affected.
Replacing printhead (see section 9.4, page 87).	In case of errors in printout.



### NOTICE!

The handling instructions for the use of Isopropanol (IPA) must be observed. In the case of skin or eye contact, immediately wash off the fluid thoroughly with running water. If the irritation persists, consult a doctor. Ensure good ventilation.

### 9.1 General Cleaning




### CAUTION!

Abrasive cleaning agents can damage the direct print module!

- ⇒ Do not use abrasives or solvents to clean the outer surface of the direct print module.
- ⇒ Remove dust and paper fuzz in the printing area with a soft brush or vacuum cleaner.
- ⇒ Clean outer surfaces with an all-purpose cleaner.

## 9.2 Cleaning the Transfer Ribbon Drawing Roller

A soiled print roll can lead to reduced print quality and can affect transport of material.

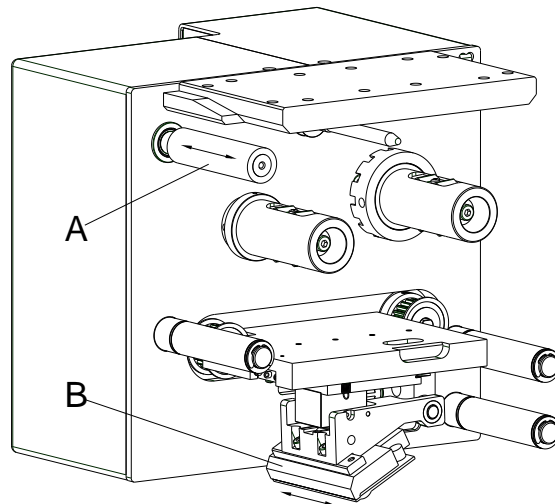

**Figure 20**

1. Remove cover.
2. Remove transfer ribbon from the direct print module.
3. Remove deposits with roller cleaner and a soft cloth.
4. If the roller (A) appears damaged, replace it.

## 9.3 Cleaning the Printhead

Printing can cause accumulation of dirt at printhead e.g. by colour particles of transfer ribbon, and therefore it is necessary to clean the printhead in regular periods depending on operating hours, environmental effects such as dust etc.



### **CAUTION!**

Printhead can be damaged!

- ⇒ Do not use sharp or hard objects to clean the printhead.
- ⇒ Do not touch protective glass layer of the printhead.

1. Remove cover.
2. Clean printhead surface (B, Figure 20) with special cleaning pen or a cotton swab dipped in pure alcohol.
3. Allow printhead to dry for 2-3 minutes before commissioning the device.

## 9.4 Replacing the Printhead



### CAUTION!

The printhead can be damaged by static electricity discharges and impacts!

- ⇒ Set up the device on a grounded, conductive surface.
- ⇒ Ground your body, e.g. by wearing a grounded wristband.
- ⇒ Do not touch contacts on the plug connections (2, 3).
- ⇒ Do not touch the printhead with hard objects or your hands.

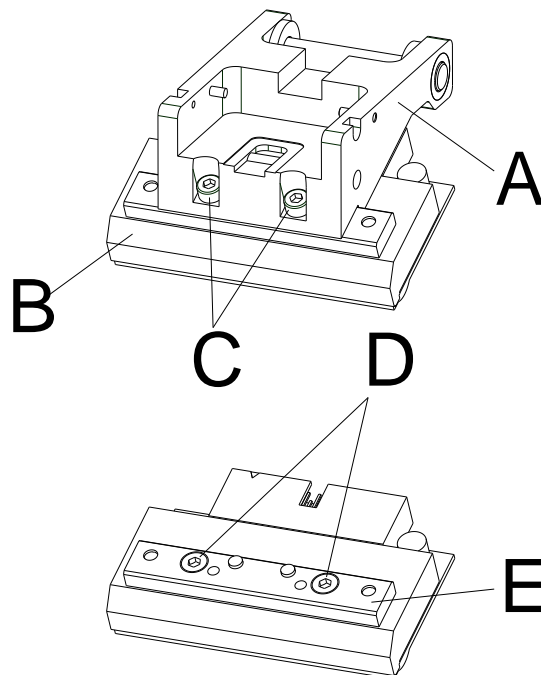
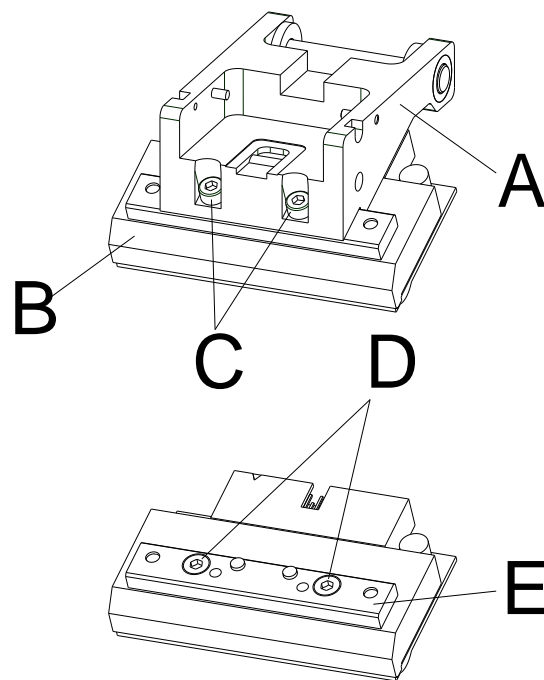


Figure 21

### Removing the printhead

1. Remove the cover.
2. Move printhead unit in an appropriate service position.
3. Press printhead support (A) slightly downwards until an Allen key can be inserted in the screws (C).
4. Unscrew screws (C) and remove printhead (B) with printhead flat rod (E).
5. Remove connection at the rear of the printhead.
6. Remove screws (C) and afterwards the printhead (B).

**Figure 22****Installing the printhead**

1. Fix the printhead flat rod (E) with screws (C) to the printhead. Ensure the correct position of flat rod (see illustration).
2. Insert connection assembly to the new printhead.
3. Position printhead (B) in printhead support (A), so the engaging pieces catch in the appropriate holes in the printhead support (A).
4. Hold printhead holder (A) with a finger slightly on the pressure roll and check the correct position of printhead (B).
5. Screw in screw (C) and tighten it with an Allen key.
6. Insert again the printhead cable.
7. Insert the transfer ribbon (see chapter 5.8, page 36).
8. Enter the resistance value of the new printhead in the menu *Service Functions/Heater resistance*. The value is indicated on the type plate of printhead.
9. Start a test print to check printhead position.



## 9.5 Angle Adjustment (Intermittent Mode)

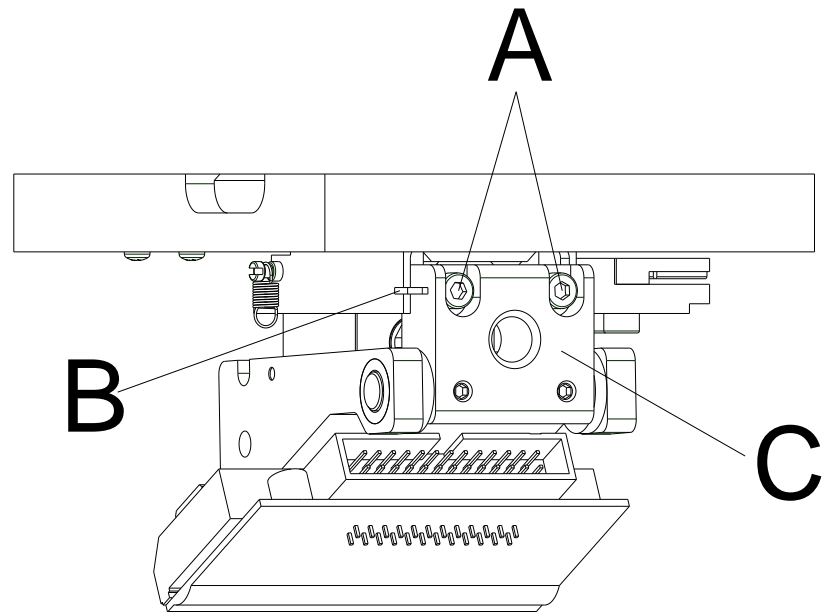


Figure 23

The installation angle of the printhead is default 26° to the print surface. However, manufacturing tolerances of printhead and mechanics can require another angle.



### CAUTION!

Damage of printhead by unequal use!

Higher wastage of ribbon by faster ripping.

⇒ Change factory settings only in exceptional cases.

1. Loosen slightly Allen head screws (A).
2. Move adjusting part (C) to adjust the angle between printhead and printhead support.  
move downwards = decrease angle  
move upwards = increase angle
3. Tighten again the Allen head screws (A).
4. Start a print order with approx. 3 layouts to check the correct unwrinkled ribbon run.



### NOTICE!

The slots (B) serve for position control. Pay attention to a parallel adjustment.

## 9.6 Print Quality Optimisation

The following table shows some possibilities to improve the print quality. Generally you have to note: the higher the print speed the lower the print quality.


Problem	Possible solution
Regular inferior print quality	<ul style="list-style-type: none"> <li>• Increase contrast</li> <li>• Increase pressure</li> <li>• Reduce print speed</li> <li>• Reduce transfer ribbon speed</li> <li>• Reduce distance between printhead and print surface</li> <li>• Change combination of transfer ribbon and print medium</li> <li>• Control print surface (too soft/too hard)</li> <li>• Change print angle</li> </ul>
Partial inferior print quality (on one side)	<ul style="list-style-type: none"> <li>• Align surface parallel to printhead</li> <li>• Set regular transfer ribbon tension</li> <li>• Set regular printhead angle</li> </ul>
Partial inferior print quality (periodical)	<ul style="list-style-type: none"> <li>• Sharp surface even</li> <li>• Reinforce surface against bending</li> </ul>

## 9.7 Cycle optimisation (Intermittent Mode)



### NOTICE!

Number of cycle is a complete print cycle per time unit.

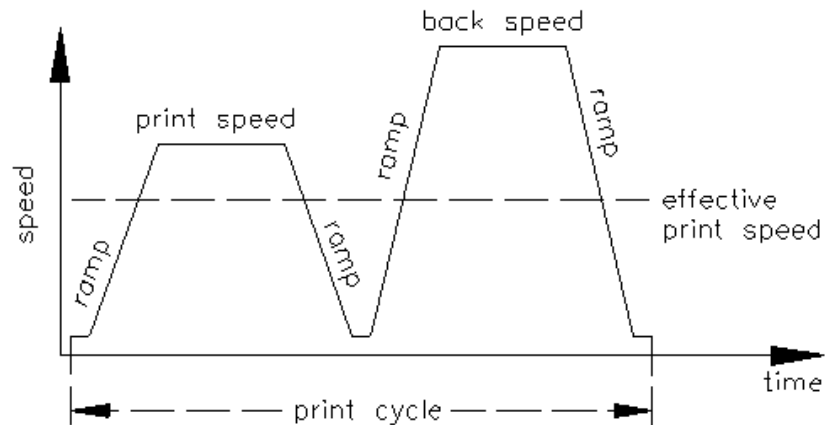

**Figure 24**

In case of 'time critical' applications you have the possibility with a good selection of different device parameters to increase the effective print speed and in this way the clock cycle.

- Generally increase the print speed.
- Generally increase the back speed.
- Increase acceleration and brake ramp.
- Change zero point of machine.
- Avoid vertical installation position of print mechanics. Install the machine in horizontal position.
- Ensure a short distance between printhead and print surface.
- Switch off ribbon save function.
- Optimise the layout to a short print way, i.e. less blanks, no borders at the top res. bottom, rotate the layout.



## 10 Signal Diagrams

### 10.1 Continuous Mode




#### NOTICE!

The line 'data receipt' indicates when the direct print module receives data.

#### Dispensing mode: Dynamic

Number of layouts per print order: 1  
Data memory: standard  
Ribbon save: On  
Trigger input print start: increasing slope

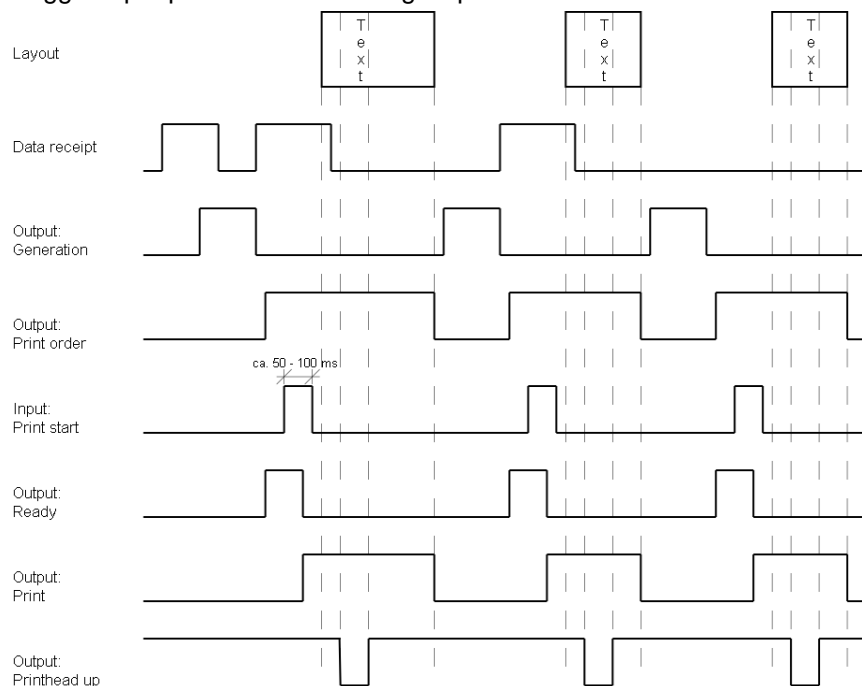

#### Layout

In 'dispensing mode: dynamic' the layout distance onto the material is not determined by the layout length but by the time between start impulse and print start input.


Because of the fact that the setting 'data memory: standard' the next print order is generated after the previous one is finished and a print order is only finished after the feed of the complete layout, the smallest possible time between two start impulses depends also from the layout length.

In case the printable data is only at the beginning of the layout and the rest of the layout is empty, then it is possible to decrease the time of start impulse by minimising the layout length (not for 'data memory: extended').

#### Data receipt

As soon as the generation of a layout is finished, a new one is send to the direct print module. The time of receipt for the first layout is normally shorter because at this time the direct print module has no further action. At receipt of the following layout, the time of receipt is longer because the direct print module receives data and prints at the same time.

Number of layouts per print order: 1  
 Data memory: extended  
 Ribbon save: On  
 Trigger input print start: increasing slope

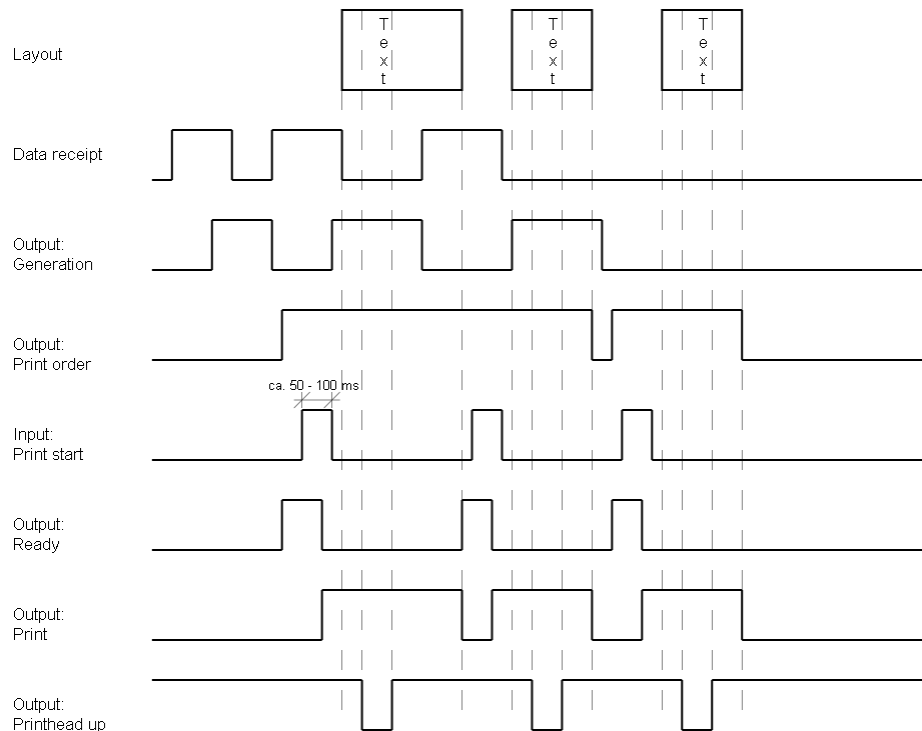**Layout**

For a better comparison we used the same layouts as before.

**Data receipt**

As soon as the generation of the layout is finished a new one is send to the direct print module.

**Data receipt/  
generation**

The time of receipt for the first layout is normally shorter because at this time the direct print module has no further action. At receipt of the following layout, the time of receipt is longer because the direct print module receives data and prints at the same time.

**Generation**

In mode 'data memory: extended' already received data is always generated after the start of a print order.


**Print order**

Before the current print order is finished the next one is already generated. The signal output is therefore active and the next start impulse can be send.

**Print**

Before the next start impulse is send, the print has to be finished as otherwise the impulse is ignored.

Number of layouts per print order: 3  
 Data memory: Off/standard/extended  
 Ribbon save: On  
 Trigger input print start: increasing slope

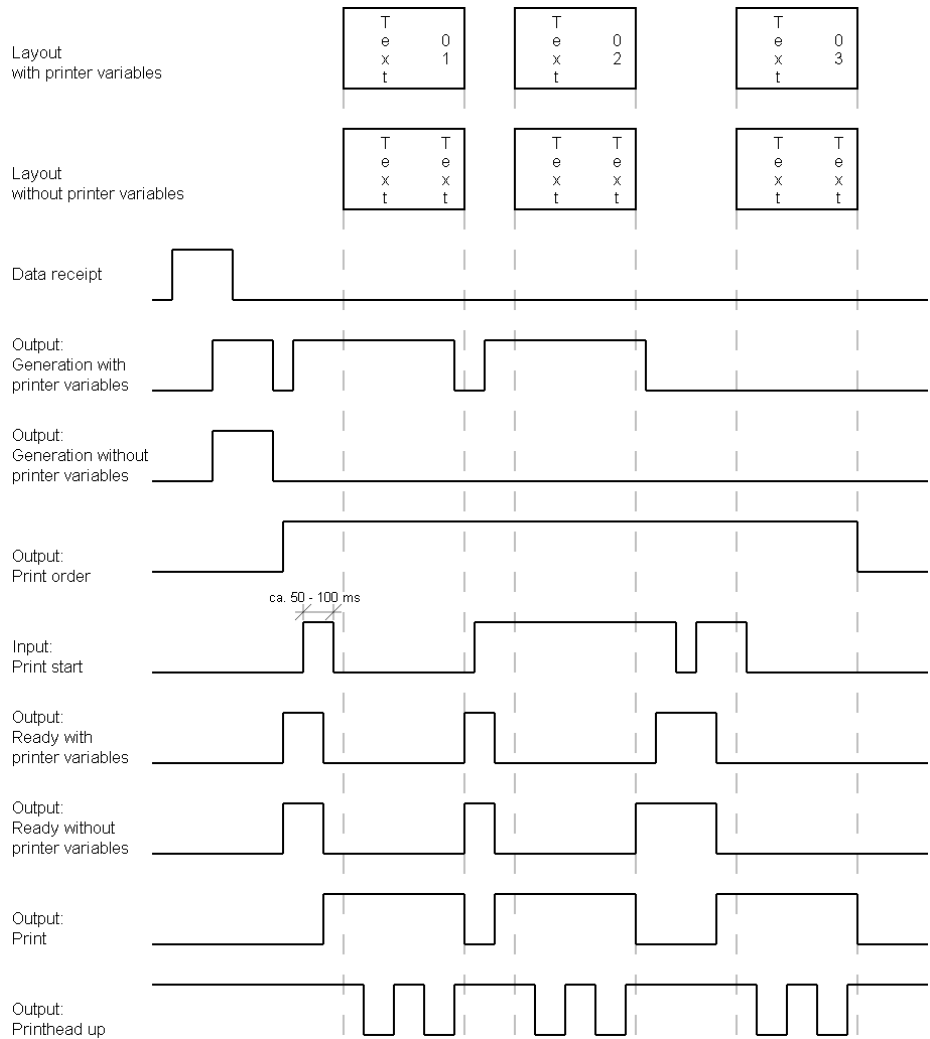

**Layout/generation with module variables**

The use of printer variables means that each layout is different and the direct print module has to generate several parts of the layout anew, e.g. variable counter.

**Layout/generation without module variables**

Each of the 3 layouts which are to print are the same and therefore it is only necessary to generate the layout once.

**Data receipt**

Because only 1 print order is send, the direct print module has only to receive once.

**Print order**


As the print order consists of 3 layouts, the print order output is active as long as all 3 layouts are printed.

**Print start/print**

In dispensing mode dynamic only the slope of the start impulse is recognised as valid print start signal. However, the impulse should have a minimum impulse width of 50 ms.

**Dispensing Mode:  
Static**

Number of layouts per print order: 4  
 Data memory: Off/standard/extended  
 Ribbon save: On  
 Trigger input print start: level High

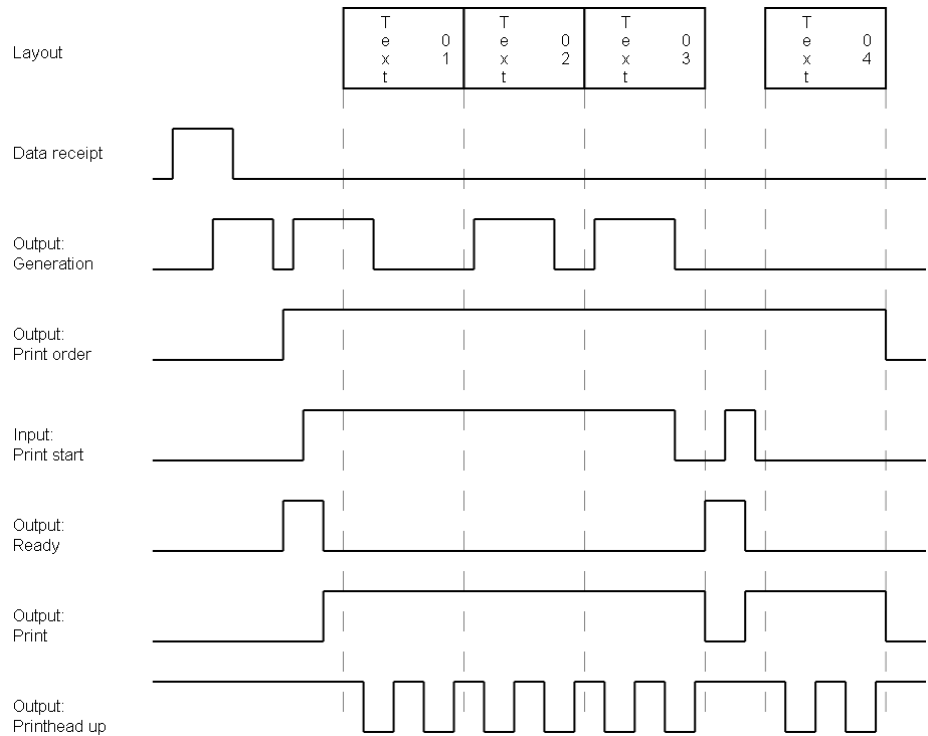**Layout**

4 layouts with counter.


**Print start/print**

In 'dispensing mode: static' the level of the start impulse is recognised as valid start signal. In case the level is activated then the print is continued immediately if the following layout is already generated. After deleting the signal, the machine prints until the end of the current layout and then the direct print module waits for the next start impulse.




### 10.2 Intermittent Mode


#### Single item processing

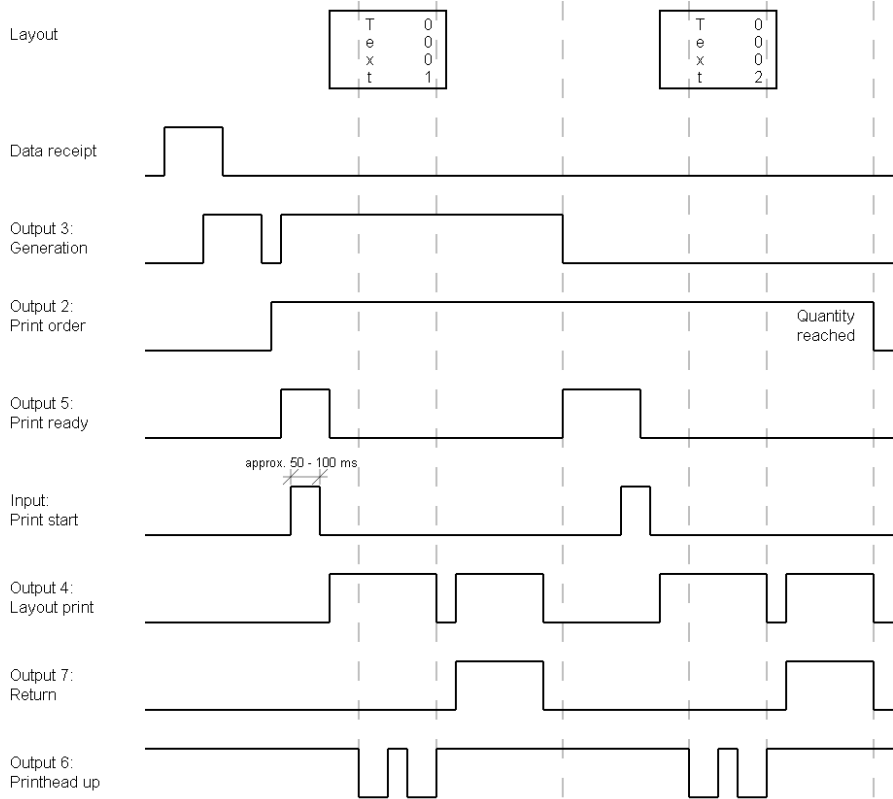

#### Continuous mode

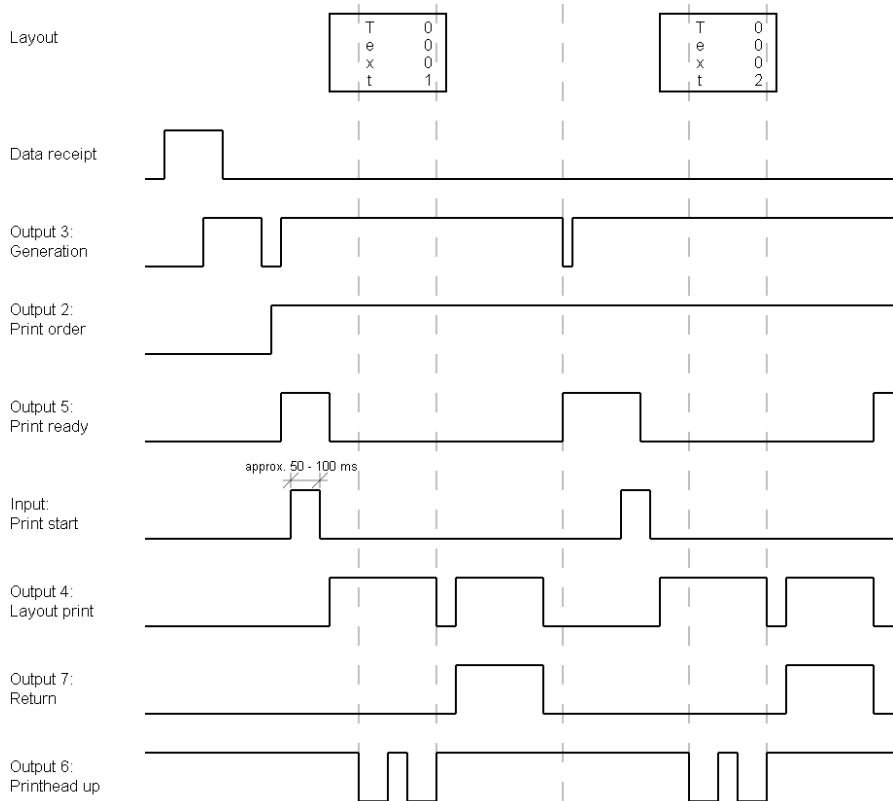

**Continuous mode,  
return without 'layout  
printing' signal**

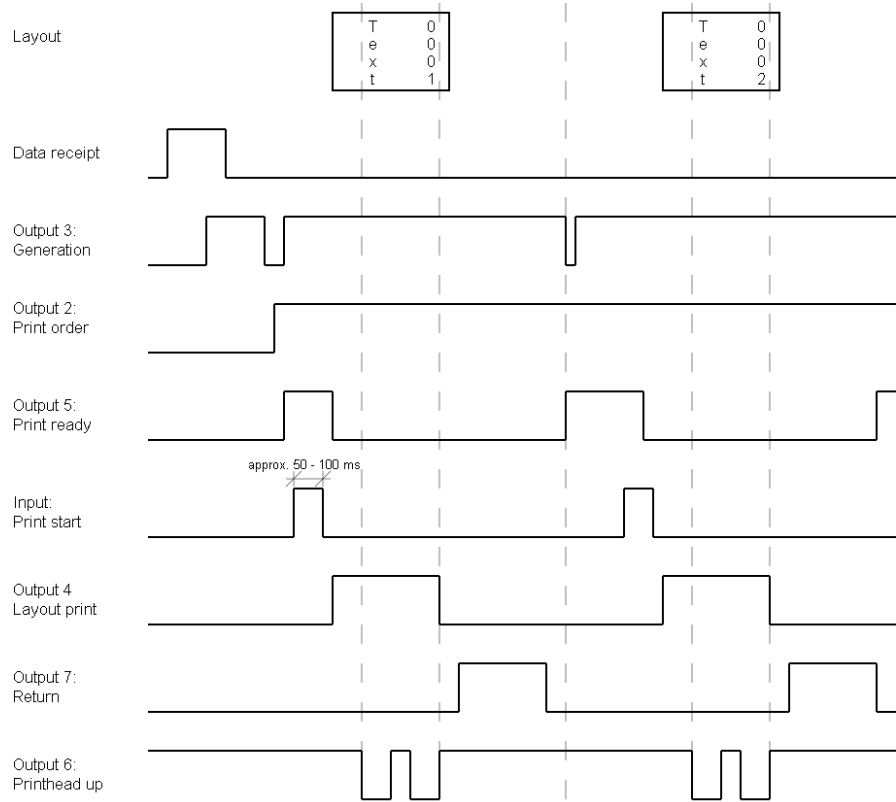

## 11 Error correction

Error message	Cause	Remedy
1 Line too high	Line rises up completely or partly over the upper edge of label.	Move line down (increase Y value). Check rotation and font.
2 Line too low	Line rises up completely or partly over the bottom edge of label.	Move line up (reduce X value). Check rotation and font.
3 Character set	One res. several characters of the text is res. are not available in the selected font.	Change text. Change font.
4 Unknown code type	Selected code is not available.	Check code type.
5 Unvalid position	Selected position is not available.	Check position.
6 CV font	Selected font is not available.	Check font.
7 Vector font	Selected font is not available.	Check font.
8 Measuring label	While measuring no label was found. Set label length is too large.	Check label length and if labels are inserted correctly. Restart measuring anew.
9 No label found	No label available. Soiled label photocell. Labels not inserted correctly.	Insert new label roll. Check if labels are inserted correctly. Clean the label photocell.
10 No ribbon	During the print order the ribbon roll becomes empty. Defect at the transfer ribbon photocell.	Change transfer ribbon. Check transfer ribbon photocell (service functions).
11 COM FRAMING	Stop bit error.	Check stop bits. Check baud rate. Check cable (printer and PC).
12 COM PARITY	Parity error.	Check parity. Check baud rate. Check cable (printer and PC).
13 COM OVERRUN	Loss of data at serial interface (RS-232).	Check baud rate. Check cable (printer and PC).

Error message	Cause	Remedy
14 Field numer	Received line number is invalid at RS-232 + parallel interface.	Check sent data. Check connection PC - printer.
15 Length mask	Invalid length of received mask statement.	Check sent data. Check connection PC - printer.
16 Unknown mask	Transferred mask statement is invalid.	Check sent data. Check connection PC - printer.
17 Missing ETB	No end of data found.	Check sent data. Check connection PC - printer.
18 Invalid character	One res. several characters of the text is res. are not available in the selected font.	Change text. Change font.
19 Invalid statement	Unknown transferred data record.	Check sent data. Check connection PC - printer.
20 Invalid check digit	For check digit control the entered res. received check digit is wrong.	Calculate check digit anew. Check code data.
21 Invalid SC number	Selected SC factor is invalid for EAN res. UPC.	Check SC factor.
22 Invalid number of digits	Entered digits for EAN res. UPC are invalid < 12; > 13.	Check number of digits.
23 Check digit calculation	Selected check digit calculation is not available in the bar code.	Check calculation of check digit. Check bar code type.
24 Invalid extension	Selected zoom factor is not available.	Check zoom factor.
25 Offset sign	Entered sign is not available.	Check offset value.
26 Offset value	Entered offset value is invalid.	Check offset value.
27 Printhead temperature	Printhead temperature is too high. Defective printhead sensing device.	Reduce contrast. Change printhead.
28 Cutter error	With cut an error occurred. Paper jam.	Check label run. Check cutter run.
29 Invalid parameter	Entered data do not correspond to the characters allowed from the application identifier.	Check code data.

<b>Error message</b>	<b>Cause</b>	<b>Remedy</b>
30 Application Identifier	Selected application identifier is not available in GS1-128.	Check code data.
31 HIBC definition	F Missing HIBC system sign. Missing primary code.	Check definition of HIBC code.
32 System clock	Real Time Clock function is selected but the battery is empty. Defective RTC.	Change battery. Change RTC component.
33 No CF interface	Interrupted connection CPU - CF card. Defective CF card interface.	Check connection CPU - CF card interface. Check CF card interface.
34 No print memory	No print CF found.	Check CF assembly on CPU.
35 Cover open	At start of a print order the printhead is open.	Close the printhead and start print order anew.
36 BCD invalid format	BCD error Invalid format for the calculation of Euro variable.	Check entered format.
37 BCD overflow	BCD error Invalid format for the calculation of Euro variable.	Check entered format.
38 BCD division	BCD error Invalid format for the calculation of Euro variable.	Check entered format.
39 FLASH ERROR	Flash component error.	Run a software update. Change CPU.
40 Length command	Invalid length of the received command statement.	Check data sent. Check connection PC - printer.
41 No drive	CF card not found / not correctly inserted.	Insert CF card correctly.
42 Drive error	Impossible to read CF card (faulty).	Check CF card, if necessary change it.
43 Not formatted	CF Card not formatted.	Format CF card.
44 Delete current directory	Attempt to delete the actual directory.	Change directory.
45 Path too long	Too long indication of path.	Indicate a shorter path.

<b>Error message</b>	<b>Cause</b>	<b>Remedy</b>
46 Drive write-protected	Memory card is write-protected.	Deactivate write protection.
47 Directory not file	Attempt to indicate a directory as file name.	Correct your entry.
48 File already open	Attempt to change a file during an access is active.	Select another file.
49 No file/directory	File does not exist on CF card.	Check file name.
50 Invalid file name	File name contains invalid characters.	Correct entry of name, remove special characters.
51 Internal file error	Internal file system error.	Please contact your distributor.
52 Root full	The max. number (64) of main directory entries is reached.	Delete at least one main directory entry and create subdirectories.
53 Drive full	Maximum CF capacity is reached.	Use new CF Card, delete no longer required files.
54 File/directory exists	The selected file/directory already exists.	Check name, select a different name.
55 File too large	During copying procedure not enough memory space onto target drive available.	Use a larger target card.
56 No update file	Errors in update file of firmware.	Start update file anew.
57 Invalid graphic file	The selected file does not contain graphic data.	Check file name.
58 Directory not empty	Attempt to delete a not empty directory.	Delete all files and sub-directories in the desired directory.
59 No interface	No CF card drive found.	Check connection of CF card drive. Contact your distributor
60 No CF card	No CF card is inserted.	Insert CF card in the slot.
61 Webserver error	Error at start of web server.	Please contact your distributor.
62 Wrong FPGA	The direct print module is equipped with the wrong FPGA.	Please contact your distributor.
63 End position	The label length is too long. The number of labels per cycle is too much.	Check label length res. the number of labels per cycle.

<b>Error message</b>	<b>Cause</b>	<b>Remedy</b>
64 Zero point	Defective photocell.	Change photocell.
65 Compressed air	Pressure air is not connected.	Check pressure air.
66 External releaser	External print release signal is missing.	Check input signal.
67 Row too long	Wrong definition of column width res. number of columns.	Reduce the column width res. correct the number of columns.
68 Scanner	The connected bar code scanner signals a device error.	Check the connection scanner/printer. Check scanner (dirty).
69 Scanner NoRead	Bad print quality. Printhead completely soiled or defective. Print speed too high.	Increase contrast. Clean printhead or exchange (if necessary). Reduce print speed.
70 Scanner data	Scanned data does not correspond to the data which is to print.	Exchange printhead.
71 Invalid page	As page number either 0 or a number > 9 is selected.	Select a number between 1 and 9.
72 Page selection	A page which is not available is selected.	Check the defined pages.
73 Page not defined	The page is not defined.	Check the print definition.
74 Format user guiding	Wrong format for customised entry.	Check the format string.
75 Format date/time	Wrong format for date/time.	Check the format string.
76 Hotstart CF	No CF card found.	If option hotstart was activated, a CF card must be inserted. Switch off the printer before inserting the memory card.
77 Flip/Rotate	Selection of print of several columns and also mirror/rotate.	It is only possible to select one of both functions.
78 System file	Loading of temporary hotstart files.	Not possible.
79 Shift variable	Faulty definition of shift times (overlapping times).	Check definition of shift times.
80 GS1 Databar	General GS1 Databar error.	Check definition and parameter of GS1 Databar code.
81 IGP error	Protocol error IGP.	Check sent data.

Error message	Cause	Remedy
82 Time generation	Printing creation was still active at print start.	Reduce print speed. Use printers' output signal for synchronisation. Use bitmap fonts to reduce generating time.
83 Transport protection	Both DPM position sensors (start/end) are active.	Displace zero point sensor Check sensors in service functions menu
84 No font data	Font and web data is missing.	Run a software update.
85 No layout ID	Label ID definition is missing.	Define label ID onto the label.
86 Layout ID	Scanned data does not correspond to defined ID.	Wrong label loaded from CF card.
87 RFID no label	RFID unit cannot recognise a label.	Displace RFID unit or use an offset.
88 RFID verify	Error while checking programmed data.	Faulty RFID label. Check RFID definitions
89 RFID timeout	Error at programming the RFID label.	Label positioning. Faulty label.
90 RFID data	Faulty or incomplete definition of RFID data.	Check RFID data definitions.
91 RFID tag type	Definition of label data does not correspond with the used label.	Check storage partitioning of used label type
92 RFID lock	Error at programming the RFID label (locked fields).	Check RFID data definitions. Label was already programmed.
93 RFID programming	Error at programming the RFID label.	Check RFID definitions.
94 Scanner timeout	The scanner could not read the bar code within the set timeout time.	
	Defective printhead. Wrinkles in transfer ribbon. Scanner wrong positioned. Timeout time too short.	Check printhead. Check transfer ribbon. Position scanner correctly, corresponding to the set feeding. Select longer timeout time.



<b>Error message</b>	<b>Cause</b>	<b>Remedy</b>
95 Scanner layout difference	Scanner data does not correspond to bar code data.	Check adjustment of scanner. Check scanner settings / connection.
96 COM break	Serial interface error.	Check settings for serial data transmission as well as cable (printer-PC).
97 COM general	Serial interface error.	Check settings for serial data transmission as well as cable (printer-PC).
98 No software printhead FPGA	No printhead-FPGA data available.	Please contact your responsible distributor.
99 Load software printhead FPGA	Error when programming printhead-FPGA.	Please contact your responsible distributor.
100 Upper position	Sensor signal up is missing (option APL 100).	Check input signals / compressed-air supply.
101 Lower position	Sensor signal down is missing (option APL 100).	Check input signals / compressed-air supply.
102 Vacuum plate empty	Sensor does not recognise a label at vacuum plate (option APL 100).	Check input signals / compressed-air supply.
103 Start signal	Print order is active but device not ready to process it.	Check start signal.
104 No print data	Print data outside the defined label. Selection of wrong module type (design software).	Check selected module type. Check selection of left/right version.
105 Printhead	No original printhead is used.	Check the used printhead. Contact your distributor.
106 Invalid Tag type	Wrong Tag type. Tag data do not match the Tag type in the printer.	Adapt data or use the correct Tag type.
107 RFID invalid	RFID module is not activated. No RFID data can be processed.	Activate RFID module or remove RFID data from label data.
108 GS1-128 invalid	Transferred GS1-128 bar code is invalid.	Verify bar code data (see GS1-128 bar code specification).
109 EPC parameter	Error at EPC calculation.	Verify data (see EPC specification).

<b>Error message</b>	<b>Cause</b>	<b>Remedy</b>
110 Housing open	When starting the print order the housing cover is not closed.	Close the housing cover and start the print order anew.
111 EAN.UCC code	Transferred EAN.UCC code is invalid.	Verify bar code data (see corresponding specification).
112 Print carriage	Printing carriage does not move.	Check gear belt (possibly broken).
113 Applicator error	Error while using applicator.	Check applicator.
114 Left position	Left final position switch is not in correct position.	Check LEFT final position switch for correct function and position.  Check function of pneumatics for cross traverse.
115 Right position	Right final position switch is not in correct position.	Check RIGHT final position switch for correct function and position.  Check function of pneumatics for cross traverse.
116 Print position	The print position is not correct.	Check TOP and RIGHT final position switch for correct function and position.  Check pneumatics for function
117 XML parameter	The parameters in the XML file are not correct.	Please contact your responsible distributor.
118 Invalid variable	Transferred variable is invalid with customized entry.	Select correct variable without customized entry and transfer it.
119 No ribbon	During the print order the ribbon roll becomes empty.  Defect at the transfer ribbon photocell.	Change transfer ribbon.  Check transfer ribbon photocell (service functions).
120 Wrong directory	Invalid target directory when copying.	Target directory must not be within the source directory.  Check target directory.
121 No label found	No label found at the rear printhead (DuoPrint).  Soiled label photocell.  Labels not inserted correctly.	Insert new label roll.  Clean the label photocell.  Check if labels are inserted correctly.
122 IP occupied	The IP address was already assigned.	Assign a new IP address.

<b>Error message</b>	<b>Cause</b>	<b>Remedy</b>
123 Print asynchronous	<p>The label photocell do not work in the order as it is expected according to print data.</p> <p>The settings of the photocell are not correct.</p> <p>Settings of label size and gap size are not correct.</p> <p>No label found at the rear printhead.</p> <p>Soiled label photocell.</p> <p>Labels not inserted correctly.</p>	<p>Check label size and gap size.</p> <p>Check label photocell settings.</p> <p>Check correct loading of label material.</p> <p>Insert new label roll.</p> <p>Clean the label photocell.</p> <p>Check if labels are inserted correctly.</p>
124 Speed too slow	Print speed is too slow.	Increase the speed of customers' machine.




## 12 Additional Information

### 12.1 Column Printing


With this direct print module several columns can be printed, i.e. the information of one column can be printed several times (depending on its width) on a layout. Caused by this the use of the complete print width is possible and the generating time is enormously reduced.


For example 4 columns with a width of 25 mm or 2 columns with a width of 50 mm can be printed onto a layout with a width of 100 mm. Please note that the first layout is always the one with the largest x coordinate, i.e. it has the largest distance to the printhead.

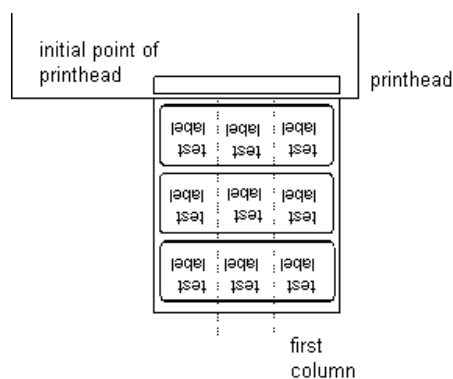




#### Setting the print of several columns



Press key **F** to access the function menu.



Press key  as long as you arrive the menu *Layout layout*.


Press key  to confirm the selection.

Press key  as long as to the menu item *Width/Columns*.

Press keys  and  to set the layout width. The *Width* is the width of one column, e.g. 20.0 mm.

Press keys  and  to arrive the *Column* input field.

Press keys  and  to change the number of columns, e.g. 4 columns with a layout width of 20.0 mm.

Press key  to start the print with input of number of layouts and number of lines. The number of layouts corresponds to the number of layouts that should be printed.  
e.g. Columns: 3, Items: 4

label 6	label 5	label 4
label 3	label 2	label 1

The first four layouts were printed but not layouts 5 and 6.

## 12.2 Hotstart



### NOTICE!

The data is saved onto CF card. Therefore the CF card is a condition for the *Hotstart* menu item.

The function *Hotstart* contains e.g. that in case of a power failure the currently loaded layout can be further processed without any loss of data. Moreover a print order can be interrupted and to be continued after switching on the direct print module anew.



### NOTICE!

At an active *Hotstart* all necessary data is stored on the CF card therefore do not remove the card during operation. When removing during operation, this causes the loss of all data on the CF card.

### Saving the current layout

In case the *Hotstart* function is set to on, at the start of a print order the data of the current layout is saved to the corresponding directory of the CF card.

However the following conditions have to be fulfilled:

- CF card inserted in drive A.
- CF card not write-protected.
- Enough free storage space onto CF card.

An error message appears in case these conditions are not fulfilled.

### Saving the print order state

At switching off the direct print module the state of the current print order is saved to the corresponding directory of the CF card.

However the following conditions have to be fulfilled:

- CF card inserted in drive A.
- CF card not write-protected.
- Enough free storage space onto CF card.

### Loading a layout and print order state

When restarting the direct print module (if the function *Hotstart* is activated) the saved layout data and the status of print order were loaded from the corresponding file on the CF card. Because of this reason, when switching on the direct print module a CF card has to be inserted in the appropriate drive. If the data cannot be loaded an error message appears.

**Starting the print order**

In case at switching off the direct print module a print order was active, then a print start is released automatically and the required res. actual number of printed layouts is refreshed. In case the print order was stopped at switching off the direct print module, it is again set to the stopped mode after switching on the direct print module anew. In case a customized entry was active during switching off the direct print module, the window for the first customized variable is displayed.

**Refreshing the variable counter**

As in the intended file only the start values of the counter are saved, they are refreshed at a new start of the print order by means of the number of printed layouts. Each counter is counted corresponding from its start value. Afterwards the position of the current and the next counter update are correctly set by means of the update intervals.

**NOTICE**

Make sure that in case graphics are onto the layout they have to be saved onto CF card.

## 12.3 Password Protection

**Example 1:** The supervisor programs a CF Card directly with the direct print module. He stores 10 different layouts. As well he adjusts the print parameters, like contrast, speed, etc. to the corresponding values. The user is only supposed to read the layouts from CF card and to print them. Therefore the supervisor blocks the function menu and the entry function by a password.

**Example 2:** The direct print module is connected to a PC. The user is only supposed to take the layouts dispensed by the direct print module and stick them on. To prevent, that the layouts or the direct print module set-up will not be changed, the supervisor blocks all device functions (e.g. function menu, entry menu, etc.) by a password.

**Example 3:** The user has to change several texts before printing. It is not allowed to change any masks (fonts, position, etc.). Therefore the supervisor blocks the entry of mask and the function menu. By this means the user indeed can print layouts, but the set-up of direct print module and the masks of the layout cannot be changed.

To receive a most flexible password protection, the device functions will be divided into several function groups:


- 1. Function menu:** In the function menu the print parameters can be changed (contrast, speed, mode, ...). The password protection prevents modifications at the print settings.
- 2. CF card:** With the functions of your CF Card layouts can be stored, loaded, etc. The password protection has to decide if no access or only readable access on CF card is allowed.
- 3. Print functions:** With key **quant** a print can be produced. In case the direct print module is connected to a PC, it can be useful, that the user is not able to produce a print manually. So the password protection prevents that prints can be produced manually.


Because of these different function groups the password protection is very flexible. The direct print module can be adjusted best to its actual order, as only certain functions are blocked.





**Definition of password**


In case no password is defined res. the password protection is not activated, all functions can be used. In the function menu you will find the menu item 'Password', where the password can be entered and the password protection activated.

Press key  to change to the function menu.

Press key  as long as you arrived the menu *Device settings*.

Press key  to confirm the selection.



Press key  as long as you arrived the menu item *Password*.

Press key  to confirm the selection.

F      Function menu  
CF     CF functions  
D      Print functions


If the password protection is active but the function menu not protected, first of all the password (four-digit number, possible values 0000 - 9999) has to be entered. Now the modifications can be made. The user can define the password in the first line (four-digit number).

Press key  to continue.

Press keys  and  to activate/deactivate (Yes/No) the password protection.

Press key  to change to the second line.


Press keys  and  to block/open individual function groups.

Press keys  and  to change to the next group.

F:	Function menu	0...open 1...locked
CF:	CF card	0...open 1...only reading access 2...access blocked
D:	Device guiding	0...open 1...open 2...no manual print release

**Activate blocked function:**

In order to execute a blocked function, first of all the valid password has to be entered.

Press key  to confirm the entry. If the correct password is entered then the desired function can be executed. If a wrong password is entered, no error message appears but the device returns to the main menu.



## 13 Index

### C

Clamping force (ribbon roll), increase .....	37
Column printing .....	109
Compact Flash Card	
Change directory .....	79
Copying.....	83
Define user directory.....	77, 78
Delete file .....	81
Display structure .....	75
Filter .....	84
Firmware update.....	84
Formatting.....	82
Load file .....	80
Load layout .....	78
Navigation.....	76
Save configuration .....	81
Save layout .....	80
Connecting .....	34
Connections, control unit.....	11
Connections, print mechanics .....	10
Continuous mode	
Material guiding .....	12
Material speed .....	12
Print principle .....	12

### D

Display during printing.....	73
------------------------------	----

### E

Encoder, pin assignment.....	28
Environmentally-friendly disposal.....	7
Error messages/corrections .....	107
Error messages/Error corrections .....	99, 100, 101, 102, 103, 104, 105, 106, 107

### F

Function menu	
Date/time .....	69
Device settings .....	62, 63, 64
Emulation.....	68
Interface.....	67
IO parameters.....	65, 66

Layout .....	54
Main menu .....	72
Maschine parameters (continuous mode) .....	50, 51, 52
Maschine parameters (intermittent mode) .....	52, 53
Network .....	66
Print settings .....	49
Remote console .....	66
Ribbon save .....	55, 60, 61
Ribbon save (continuous mode) .....	56, 57, 58, 59
Service functions .....	70, 72
<b>H</b>	
Hotstart .....	110, 111
<b>I</b>	
Initial operation .....	35
Initial operation, preparations .....	34
Inputs/outputs .....	21, 22, 23
Installation at machines .....	30
Instructions .....	5
Intended use .....	5
Intermittent mode	
Print position .....	13
Print principle .....	13
<b>K</b>	
Keyboard	
Standard .....	39
Text entry/User guiding .....	40, 41
<b>M</b>	
Maintenance/cleaning	
Angle adjustment .....	89
Cycle optimisation .....	91
General cleaning .....	85
Print quality optimisation .....	90
Printhead, cleaning .....	86
Printhead, replacing .....	87, 88
Ribbon drawing roller, cleaning .....	86
Schedule .....	85
Menu structure	
Continuous mode .....	43, 44, 45
Intermittent mode .....	46, 47, 48
<b>O</b>	
Operating conditions .....	15, 16, 17, 18

**P**

Password protection .....	112, 113
Pneumatic power supply, connecting.....	32
Pressure power, adjusting.....	33
Print control .....	35
Print unit, front .....	10

**S**

Safety Instructions .....	6, 7
Scope of delivery .....	29
Signal diagrams	
Continuous mode.....	93, 94, 95, 96
Intermittent mode.....	97, 98
Space, cable outgoing.....	31

**T**

Technical data .....	19, 20
Transfer ribbon, loading .....	36

**U**

Unpacking .....	29
USB Stick	
Change directory .....	79
Copying.....	83
Delete file .....	81
Display structure .....	75
Filter .....	84
Firmware update.....	84
Load file .....	80
Load layout .....	78
Navigation.....	76
Save configuration .....	81
Save layout .....	80



---

Carl Valentin GmbH  
Neckarstraße 78 – 86 u. 94 . 78056 Villingen-Schwenningen  
Phone +49 (0)7720 9712-0 . Fax +49 (0)7720 9712-9901  
info@carl-valentin.de . www.carl-valentin.de